


GREEN MOWER
LM22GF
LM26GF

TEEING GROUND MOWER
LM26TF

BARONESS

LAWN MOWER

22-8-00

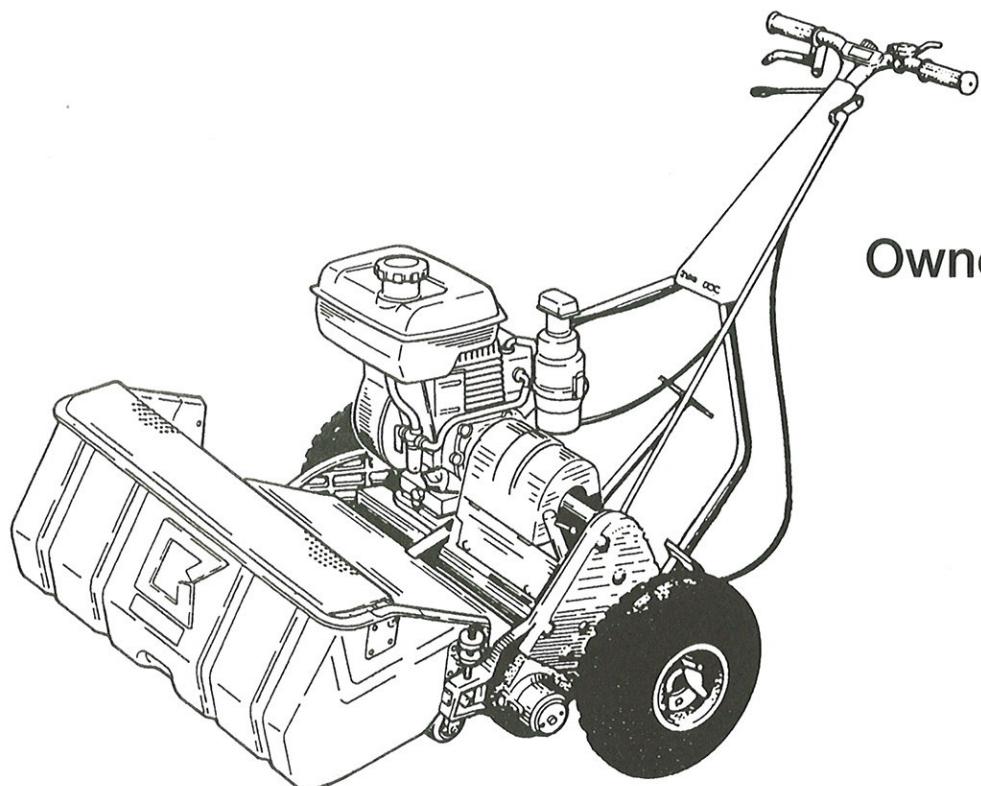

Owner's Handling Manual & Parts Catalog

Read this manual before using the machine.

BARONESS

CONTENTS

CONTENTS	1
Warning for Safety	2
Greeting	2
Owner's Handling Manual	2
1. Part names	3
2. Specifications	4
3. Features	4
4. Assembly/adjustment of main unit	5
5. Inspection before use	6
6. Fastening of each portion	6
7. Engine starting sequence	6
8. Machine operation	6 • 7 • 8 • 9
9. Blade engagement	9 • 10 • 11
10. Long-term storage	11
11. Precautions for engine operation	12
12. Special optional parts	12 • 13

Parts Catalog	14
1. Engine clutch stand	15 • 16
2. Drum wheel	17 • 18
3. Blade reel cylinder/front roller/bottom blade	19 • 20
4. Frame/transmission	21 • 22
5. Handle/engine	23 • 24
6. Accessory parts	25 • 26
7. Internal expanding brake parts	27 • 28
8. LM22GE/26GE dethatching reel (Option)	29 • 30
9. Sweeping brush (Option)	31 • 32


Warning for Safety

Warning marks indicate important items for safety.
Observe them strictly.

Warning Marks



DANGER
Negligence of the warning will cause death or serious injury.

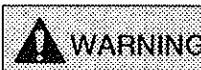

WARNING
Negligence of the warning may cause death or serious injury.



CAUTION
Negligence of the warning may cause injury.

Symbols



See the Handling Manual



Danger mark
Hand cut




Engine switch lever



Danger mark
Foot cut



Fuel : Gasoline

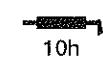

Grease
Every 10hours



Hot surface
Burn on hand



CAUTION : Joint shaft

Greeting

Thank you very much for purchasing BARONESS GREEN MOWER and TEEING GROUND MOWER.

This Owner's Handling Manual explains the method of correct handling, adjustment, and maintenance of the mower. Thoroughly read the manual before operation. Carefully read the engine operation manual before starting the engine. Mowers undergo thoroughgoing trial operation and inspection before shipment. However, whether or not the mower can exhibit the expected performance depends on the handling method, inspection/adjustment before and after operation, and the properness of lubrication. Handle the mower correctly for safe and excellent operation for an extended period of time.

Owner's Handling Manual

Precautions:


- The name of the model may be different when you make an inquiry about your machine. Advise us of the machine number as well.
- The contents of this manual are subject to change without notice.



CAUTION

The warning marks attached to the machine indicate precautions for safety. Read them carefully. Understand well the operating procedures and safety precautions before using the machine. The marks and explanatory notes should be kept clean. If they are lost or damaged, attach new marks.

1. Part names

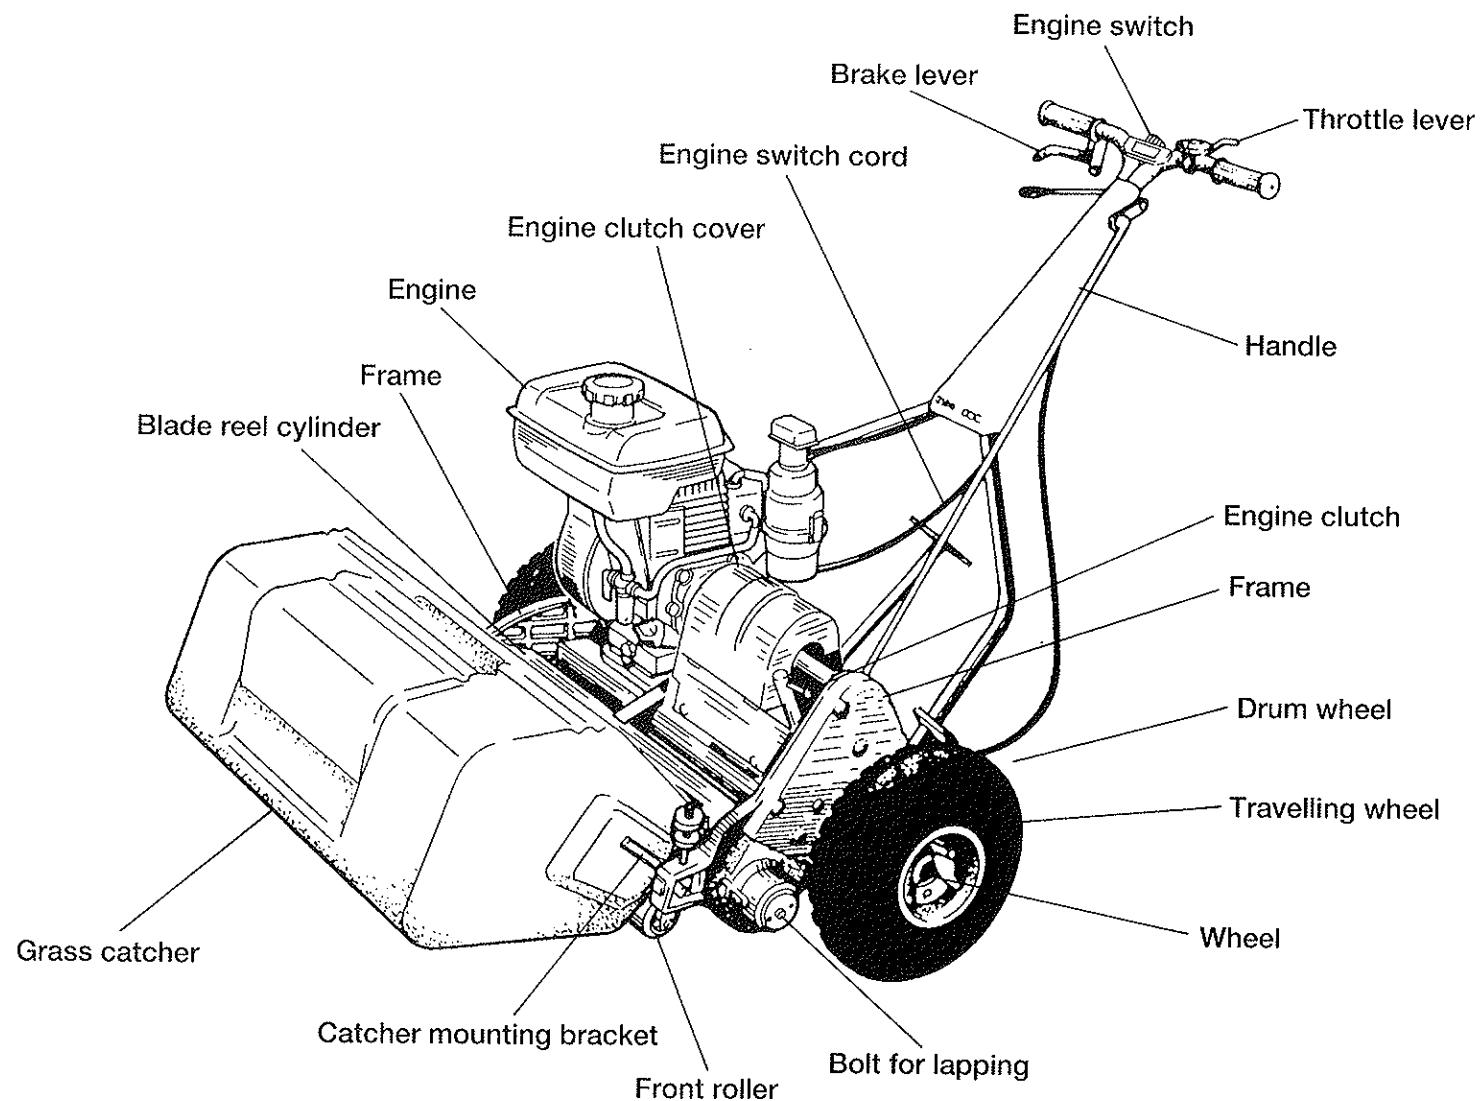

2. Specifications

2-1. Main unit



The engine brake will not work. Use a carrier or truck to move the mower.

	LM22GF	LM26GF	LM26TF
Length (cm)	135	←	←
Width (cm)	91	100	←
Height (cm)	111	←	←
[Weight] During operation (kg)	84.3	89	←
[Weight] Grass catcher	3.2	3.8	←
[Mowing section] Mowing width (cm)	55.6	64.6	←
[Mowing section] Reel dia. (cm)	φ 12.8	←	←
[Mowing section] Number of reel blades *	9 *	←	7
Frame	Aluminum alloy	←	←
Front roller (cm)	φ 6×57.7	φ 6×66.6	←
Drum wheel (cm)	Steel pipe drum φ 19.6×53.5	Steel pipe drum φ 19.6×62.5	Aluminum drum φ 20.3×62.5
Speed (km/h)	5	←	4.3
Engine	ROBIN EY15D K9270000020		←

- The weight excludes the travelling wheel (6.4 kg) and grass catcher.
- The above speed is available when the engine is rotating at 3000 rpm.
- * 11-blade reel cylinder available as an option.

3. Features

- 3-1. The handle is provided with an engine switch for safe operation.
- 3-2. The coil spring makes uniform the preload applied to the tapered bearing by the blade reel cylinder, ensuring stable rotation and facilitating adjustment.
- 3-3. These mowers are the lightest of all models in this class, permitting easy operation.
- 3-4. The blade reel cylinder made of specially-blended heat treated steel cuts well and excels in durability.

4. Assembly/adjustment of main unit



4-1. Fit the handles into the handle pins on both sides of the frame, respectively, in order of (a), (b), and (c).

(a) Fit the handle mounting pin R (4-61) on the left frame (4-1) into the hole at the front end of the handle. ←

(b) Pull the right edge of the handle toward the inside. ←

(c) Fit the handle pin L (4-85) on the right frame into the hole at the right front end of the handle. →

※ Adjust the clutch rod according to the height of the handle.

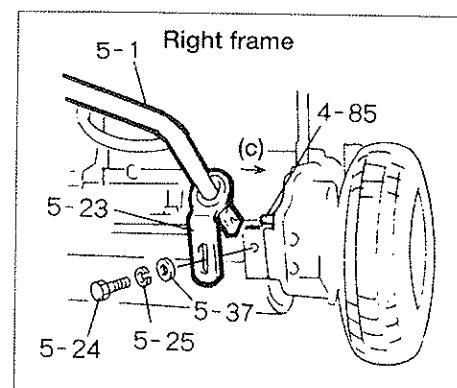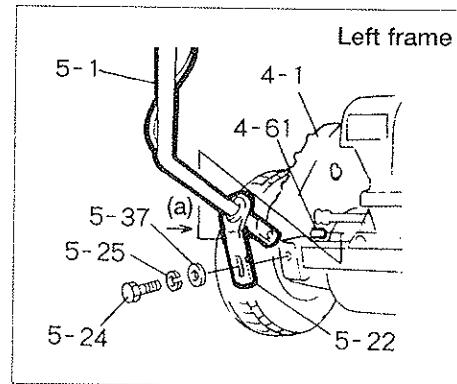


4-2. Installation of stand

Hook the U-shaped portion of the spring on the pin using a tool to install the stand.

4-3. Installation and adjustment of clutch rod


Install the clutch rod with a snap pin. Make adjustment according to the height of the handle until the clutch operates perfectly.

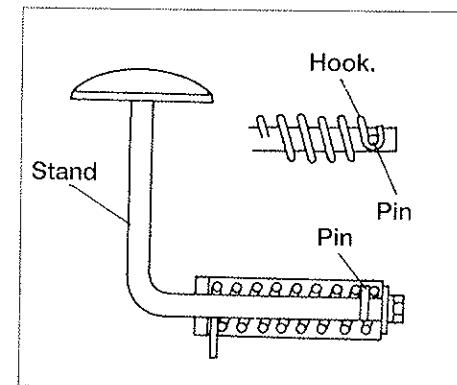

4-4. Connection of engine switch cord

Connect the engine switch cord during installation of the handle. Connect two positions - the plug and the terminal.

- (1) Connect the plug with the plug connected to the front of the engine.
- (2) Loosen the bolt at the front of the engine, insert the terminal, and tighten the bolt. (See the figure at right.) Be sure to connect the engine switch cord, otherwise the engine will not stop.

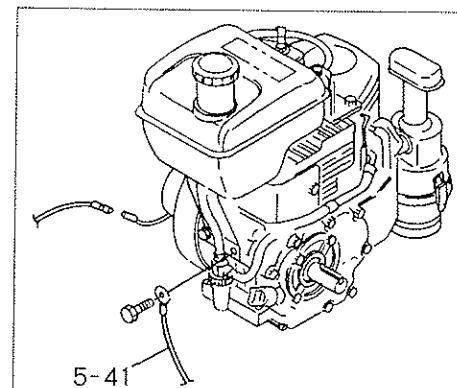

5. Inspection before use

5-1. Greasing



10h

The transmission and intermediate transmission gears are equipped with needle bearings. Grease them every 10 hours. Shortage of grease will cause heat generation and a grating sound.

5-2.

Replenish the engine with engine oil. (A correct level will be shown when the engine is placed horizontally.) Change engine oil 5 hours after the initial operation, and every 50 hours from the second time onward. Oil : SAE30.

6. Fastening of each portion

Many parts are fastened by bolts.

Bolts and nuts may be loosened some time after initial operation.

Fasten them to the specified torque.

Appropriate fastening torque (kgf-cm)

	Normal bolt	Heat treated bolt
M6	80	
M8	180	360
M10	360	720
M16	1.5-pitch left-hand thread: 360 kgf-cm	

7. Engine starting sequence

7-1.



Before starting engine


Carefully read the gasoline engine operation manual before starting the engine. Check the ON/OFF positions of the engine switch lever at the front of the handle. Set the engine switch lever in the ON position, set all moving parts in the neutral position. Check for safety - covers are in position and not damaged and there is no person around the machine - before starting the engine. Do not start the engine indoors without an appropriate ventilator.

7-2.



Starting the engine

- (1) Set the clutch lever in the OFF position. (See 9-2.)
- (2) Set the throttle lever in the high-speed position.
- (3) Set the engine switch lever in the ON position.
- (4) Set the strainer lever in the open position.
- (5) Pull the choke lever and pull the recoil starter, and the engine will start.
- (6) Return the choke lever.

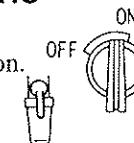


7-3.



Stopping the engine

(Remember the method for stopping the engine in an emergency.)

- (1) Set the clutch lever in the OFF position.
- (2) Set the throttle lever in the slow-speed position.
- (3) Set the strainer lever in the close position.
- (4) Set the engine switch lever in the OFF position.
- (5) In an emergency, immediately set the engine switch in the OFF position.

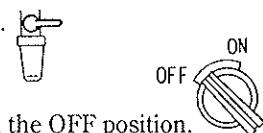

7-4.



Fuel supply



Gasoline for automobiles

- (1) Keep flame etc. away from the engine when supplying fuel. Stop the engine outdoors and allow it to cool before supplying fuel.
- (2) Keep the machine clean at all times to prevent deposition of dust, grease, or oil.

7-5.



When leaving the machine

Park the machine on a flat place. Check that the engine switch lever is in the OFF position. Do not park the machine on a slope.

8. Machine operation


8-1.



Check that each portion - especially the brake and clutch - operates satisfactorily before starting machine operation. Make sure that the machine can be stopped immediately at any time. Exercise care so that you and people around the machine will not be injured.

8-2. Travelling lever

The travelling lever is provided at right in front of the handle. Push it forward, and it will enter the OFF position and stop. Pull it to your side, and it will enter the ON position, and the machine begins to travel. Move the lever slowly.

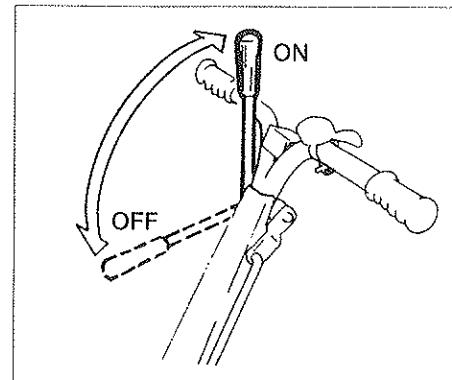


8-3. Clutch lever

The mower clutch lever is provided in the lower front position at left. Set it in the ON and OFF positions for engagement and disengagement, respectively. Set it in the OFF position when moving the machine.

8-4. Adjustment of handle height

Move the handle guide plates (5-22 and 5-23) vertically to change the height of the handle according to the height of the operator. Adjust the length of the clutch rod simultaneously. Make adjustment so that the clutch spring will completely enter the clutch when the clutch is engaged.

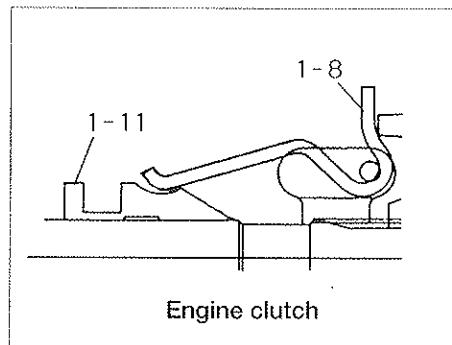

8-5. WARNING Brake lever

The brake lever is provided at right. Grip the lever, and the brake drums set on the right and left drum shafts operate simultaneously. If the braking performance is nonuniform, make adjustment for uniform operation.

8-6. Throttle lever

The throttle lever is on the left side of the handle. The lever controls the engine speed. The adjustment range is 1350-3300 rpm. The engine speed should be 3000 rpm for mowing operation.

8-7. [IMPORTANT] Adjustment of engine clutch

(1) When reinstalling the engine:

Adjust the clearance between the engine clutch and clutch facing so that it will be approx. 0.5 mm when the travelling clutch is engaged. For adjustment, loosen the four bolts that are securing the engine, and insert a thickness gauge (attached) into the front and rear. Make adjustment so that the gap will be parallel, and then fasten the bolts.


(2) After using a new machine for 10 hours or when the clutch spring is changed:


Make adjustment so that the difference in the position of the clutch plate when the clutch is engaged and disengaged will be 0.8-1 mm.

Loosen the bolt (1-10) that is securing the lever mounting base (1-7), screw in the base up to an appropriate position, and then secure the base with the bolt. (See the figure below.)

Apply grease sufficiently to the clutch and clutch mover, and check them every 10 hours.

Adjust the clutch mover so that it will be in the center of the clutch when the clutch is engaged.



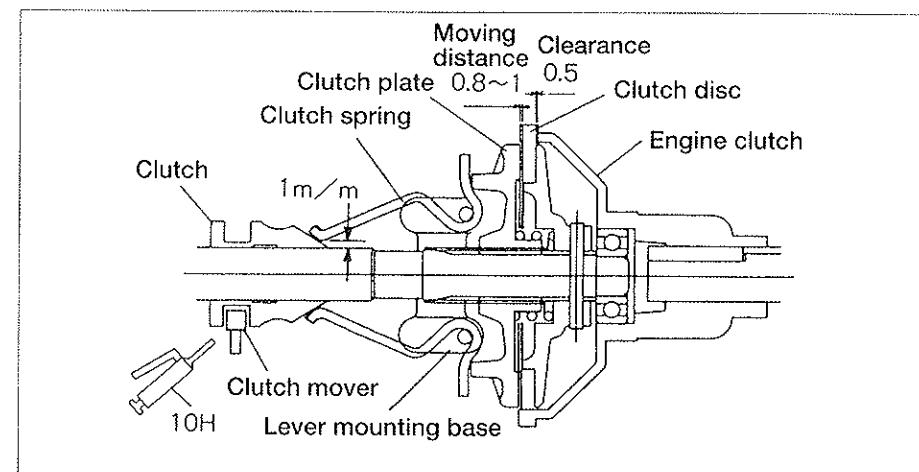


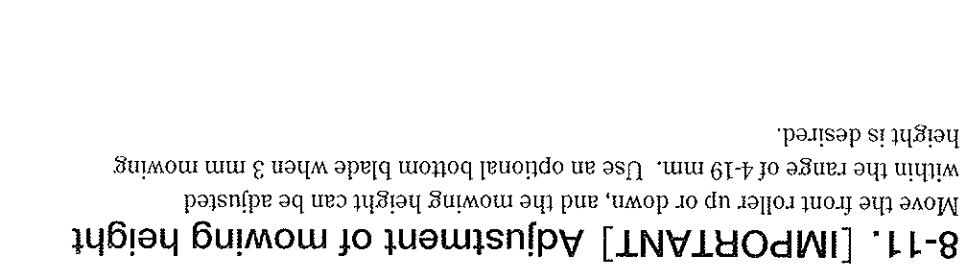

- Engine clutch and clutch master
- Differential gear section
- Intermediate shaft on left frame
- Shafts on left frame
- Every 10 hours ←

Fill up grease nipples with approx. 1g of grease (EXCELITE EP NO.2) every 10 hours-one or two times injection with a small manual grease pump. Needle bearings are used, so exercise care when greasing them.

8-12. [IMPORTANT] Greasing

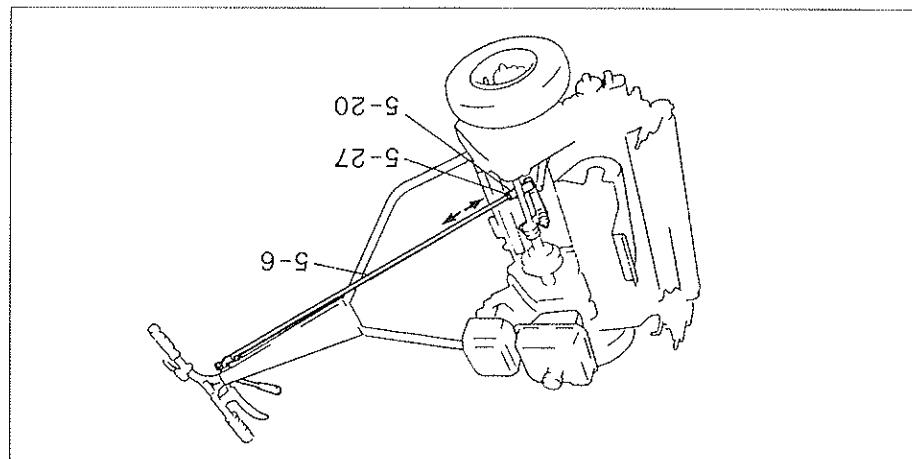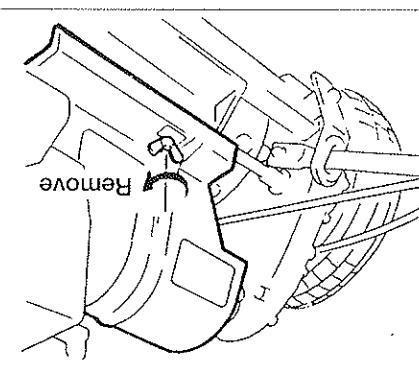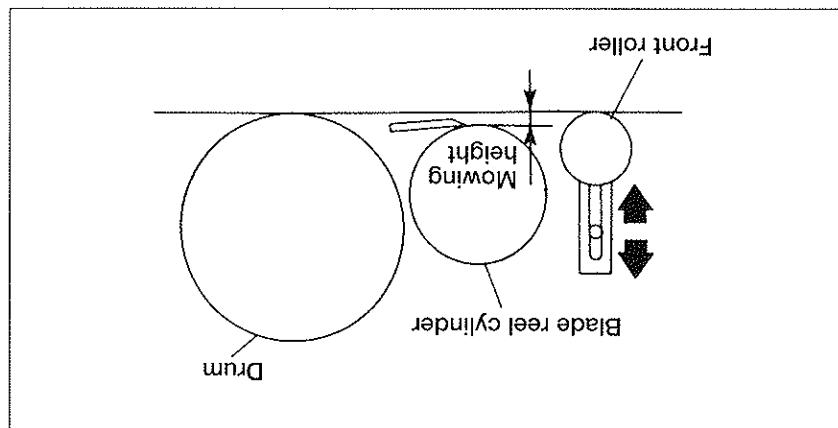

- (1) Check the entire portion of the blade reel cylinder to check which portion is dull. (If a newspaper cannot be cut in any portion, put in two sheets of paper to carefully check which portion is dull.)
- (2) Connect the lappling machine (RM20) or lappling handle (option) to the special bolt 35 (Parts Catalogue No.4-72) of the machine.
- Conduct lappling after moving operation (before adjusting the engagement).


9-1. [IMPORTANT] Lappling

Grind and adjust the blade reel cylinder and bottom blade entirely so that a newspaper will be cut sharply.

- (1) Loosen the tall nut of the roller bracket, and move the front roller up or down with the mowing height adjusting screw.
- (2) Position the front roller with the mowing height gauge.
- (3) Make adjustment at both edges.
- (4) Tighten the tall nut, and secure the roller bracket.
- Brings the mowing height gauge into contact with the front roller and drum (as shown above), and adjust the height of the bottom blade.
- * The minimum mowing height is the average height on the green. Lawn may be shaved when the undulation of the green is substantial. Set the mowing height slightly higher in that case.

- (2) When the mowing height of 7 mm or less is desired for the teeing ground, use the green mower bottom blade.
- (2) When the mowing height of 7 mm or less is desired for the teeing ground, use the green mower bottom blade.
- (2) When the mowing height is the average height on the green. Lawn may be shaved when the undulation of the green is substantial. Set the mowing height slightly higher in that case.

[IMPORTANT] Adjustment of front roller height

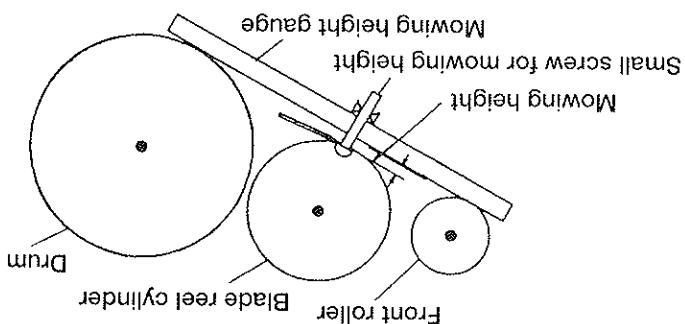

(1) Set the mowing height gauge at the desired height. The minimum mowing height is 19 mm.

(1) Set the mowing height respect to each bottom blade thickness is shown below. (The maximum height is 19 mm.)

Blade thickness (mm)	Min. mowing height (mm)	Standard/thin blade for green	Blade thickness 3.0	Tippled blade for green	High-speed-steel blade: 3.0	Blade thickness 4.0	Tippled blade for green	Standard tippled blade: 5.0	Teeing ground
Special No.2 for tourname nt	1.8	3.0	3.0	3.5	3.5	4.0	4.0	5.0	7.0
Standard blade: 2.5	3.5	Blade thickness	Tippled blade for green	Standard tippled blade for green	High-speed-steel blade: 3.0	Blade thickness	Tippled blade for green	Standard tippled blade	Tippled blade for green
Blade thickness (mm)	Min. mowing height (mm)	Blade thickness	Tippled blade for green	Standard tippled blade for green	High-speed-steel blade: 3.0	Blade thickness	Tippled blade for green	Standard tippled blade	Tippled blade for green

8-13. Setting the mowing height gauge and blade thickness

9-4. Cylindrical grinding and installation of blade reel cylinder

(Ask the dealer you purchased the machine from for cylindrical grinding.)
Cylindrically grind the blade reel cylinder when it is worn away and has become conical.

(2) When there is a gap on the right frame side, loosen the lock nut, and turn the right cam bush counter-clockwise as much as the gap.

(b) After adjustment, firmly fasten the lock nut.
the gap. Turn it clockwise by 30° to raise the bottom blade by 0.1 mm.


(a) Loosen the lock nut, and turn the left cam bush clockwise as much as the bottom blade.

(1) When there is a gap between the blade reel cylinder and the left frame side of the blade are not in parallel.

The above method is used when the edges of the blade reel cylinder and bottom blade lowered within a maximum range of 0.3 mm. (Fig.9).

Turn the cam bush on both sides of the bottom blade, and the blade will be raised and

9-3. [IMPORTANT] Cam adjustment

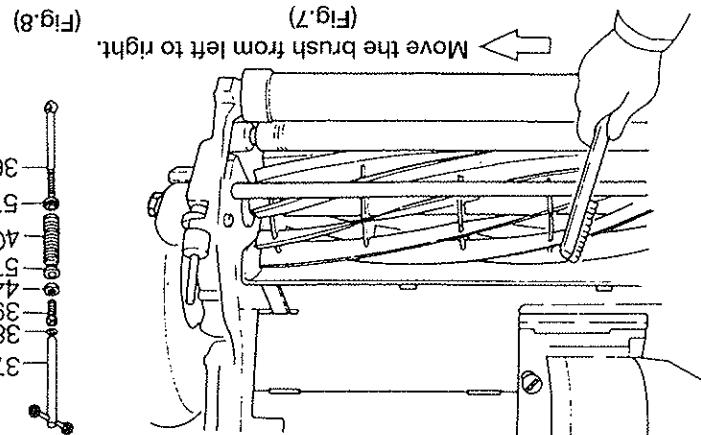

The thread pitch of the threaded pipe is 1 mm. Turn the threaded pipe clockwise by two turns, and appropriate spring pressure will be maintained. Use the above as guidelines. The thickness of the bottom blade will decrease by approx. 1 mm on average.

After the green mower is used for one season, the diameter of the blade reel cylinder and blade reel cylinder is worn away and the spring pressure decreases, loosen the lock nut (3-44) and turn the threaded pipe (3-39) clockwise, and the spring pressure will increase. (Fig.8)

When the blade reel cylinder is worn away and the spring pressure decreases, loosen the lock nut (3-44) and turn the threaded pipe (3-39) clockwise, and the spring pressure will engage both sides to the extent that a newspaper will be cut sharply.

(b) Lightly engage the blade reel cylinder and bottom blade uniformly on both sides. (3-37) clockwise adjustment for slight engagement, and turn it counter-clockwise for firm engagement. (Fig.8)

(a) Uniforlmy adjust the bottom blade on the right and left sides. Turn the cutter adjuster

9-2. [IMPORTANT] Engagement

Be careful of the fingers, which turn the blade reel cylinder, when cutting a newspaper to check sharpness. Uniformly lap the right and left sides of the blade with the blade reel cylinder, and the life of the blade will be maximized.

Both blade reel cylinder and bottom blade are edge. Handle them carefully.

(6) Afterlapping, remove the abrasive with steam, etc.

(5) Repeat operations (3) and (4). When the blade reel cylinder and bottom blade are in contact with each other uniformly, apply abrasive to the blade reel cylinder entirely for finallapping.

(4) Keep rotating the blade reel cylinder, and stop rotation when the contact sound disappears. Put in a newspaper again to check the blade reel cylinder entirely for the sharpness of each portion.

Bleed powder (#200-#400) and oil at the ratio of 1:3 or 1:4 to make an abrasive.

The blade reel cylinder, be sure to move the brush from left to right. (Fig.7)
The blade reel cylinder will be worn 3-4 times earlier than the left side. When applying abrasive to the right side (when viewed from the front of the blade reel cylinder) of the blade reel portions.


(3) Rotate the blade reel cylinder opposite to the mowing direction, and apply abrasive with a brush only to the portion where a newspaper was sharply cut. The portion where a newspaper was not cut is worn away. Do not apply abrasive to such

10. Long-term storage

- a. For the engine, refer to the engine operation manual.
- b. Cylinderically grind the blade reel cylinder every six months.
- c. Replace the bearing (30204JRF6) and seal on both sides of the blade reel cylinder every season. (Replace them even if they have not been used for many hours.)
- d. Clean the machine, and apply grease or oil to respective sliding sections.

[IMPORTANT] Completely fasten the nut on the inside to firmly secure the bearing. The fastening torque is 360 kgf-cm. A certain preload will be applied by the spring pressure. The rotational torque of the blade reel cylinder should be 8-10 kgf-cm. If it is not, check the bearing and seal.

- (a) Replace the bearing and seal on both sides of the blade reel cylinder. Use 30204JRF6 that has the smallest error.
- (b) Sufficiently apply grease (EXCELLITE EPNO2) to the bearing and seal. (Apply grease while turning the roller. The grease will be sufficient for one season.)
- (c) Method to fasten nut after installing the blade reel cylinder.

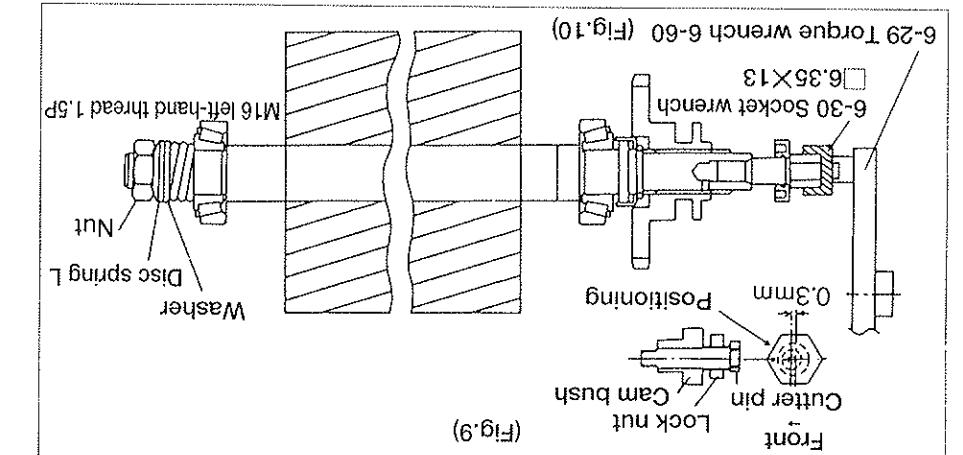

9-5. [IMPORTANT] Installation of blade reel cylinder

12. Special optional parts (For blade reel cylinder change)

For details, see the engine operation manual.

Operation hours	Every 5 hr	Every 8 hr	Every 50 hr	Inspection/supply of engine oil	First time	Cleaning of air cleaner	O	(1) Use gasoline for automobiles as the fuel of the engine.
								Check the element in 15 hours, and change oil every 50 hours. The quantity of engine oil is 0.6 liter. Use SAE30.

(2) Completely change engine oil when the machine has been used for five hours after the initial operation, because the machine is used under tough conditions with vibration and dust. Always cover the suction port of the air cleaner with a cleaner cover bag during operation.

(3) Use SAE30. Be sure to clean the air cleaner before using the machine, and replace the element with a new one every 200 hours.

(4) Fire is strictly prohibited during fuel supply. Be careful of a lit cigarette. Supply fuel outdoors after the engine is stopped and cooled.

(5) Do not start the engine in a building without a proper ventilator. The muffler and the area around the exhaust port of the engine will become hot. Do not bring gasoline, matches, dry grass, or other inflammables near hot portions.

(6) Do not start the engine in a building without a proper ventilator and the area around the exhaust port of the engine will become hot. Do not bring gasoline, matches, dry grass, or other inflammables near hot portions.

(7) Inspection before operation and nuts in respective sections for looseness. Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

Instead of a blade reel cylinder, a spiral rotary brush can be installed for detaching, and collection of fallen leaves.

Thickness of vertical blade: 0.8 mm Diameter of vertical blade: φ 128 mm
Instead of a blade reel cylinder, a spiral detaching reel can be installed for ground mower to lower the operation speed. (Reference: Parts Catalog, pp.23 and 24).
※ In the case of a green mower, use wheel gears (A48/4-49/4-50) for teething. The working depth is 2 mm underground.
for detaching.

Instead of a blade reel cylinder, a spiral detaching reel can be installed for detaching.

Thickness of vertical blade: 0.8 mm Diameter of vertical blade: φ 128 mm

Instead of a blade reel cylinder, a spiral rotary brush can be installed for detaching, and collection of fallen leaves.

Thickness of vertical blade: 0.8 mm Diameter of vertical blade: φ 128 mm
Instead of a blade reel cylinder, a spiral detaching reel can be installed for ground mower to lower the operation speed. (Reference: Parts Catalog, pp.23 and 24).
※ In the case of a green mower, use wheel gears (A48/4-49/4-50) for teething. The working depth is 2 mm underground.
for detaching.

Instead of a blade reel cylinder, a spiral detaching reel can be installed for detaching.

Thickness of vertical blade: 0.8 mm Diameter of vertical blade: φ 128 mm

To keep the engine in satisfactory status at all times, be sure to conduct maintenance and inspection according to the following table:

(10) Engine maintenance schedule
remove gasoline from the engine.

(9) When the machine is to be stored for a long time exceeding 5 months, etc. will cause you to be caught in rotating parts. An apron, towel on the belt, long string,

(8) Wear appropriate clothes. An apron, towel on the belt, long string, etc., will cause you to be caught in rotating parts. An apron, towel on the belt, long string,

(7) Inspection before operation and nuts in respective sections for looseness.

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

and nuts in

Check the joint of fuel pipe, etc. for looseness or damage. Check bolts

※ : Parts of 26 only

△ : Common to LM55GD

○ : Common to LM22GE

12-4. Common Parts List

⑪ Socket: 6.35 × 27 socket wrench K4802000362

⑩ Socket: 6.35 × 13 socket wrench K4802000352

⑨ Torque wrench: 6-60 K4802000370 For measurement of reel rotational torque

⑧ — screwdriver-N-through K482000020

⑦ Reel lapping handle K6125000052

⑥ +/— screwdrivers K482000010

⑤ Pliers K483000012

④ Spanner: 24 × 27 K4810240272

③ Spanner: 19 × 22 K4810190222

② Spanner: 13 × 17 K4810130172

① Spanner: 8 × 10 K4810080102

Optional tools

Use of ⑥ and ⑩ in the blade reel cylinder installation diagram in Fig.10 permits measurement of the rotational torque (8-10 kgf-cm) of the blade reel cylinder.

12-3. Special optional tools and reel rotational torque measuring instruments


(Example)	Catalog No.	Code No.	Part Name	Qty
	1-1	K6911000050	Engine clutch	1

All parts in this parts catalog are controlled by computer. However for prevention of delivery of wrong parts, advise us of the catalog No., code No., and part name.
★ Ordering parts

PARTS CATALOG

TEENING GROUND MOWER
LM26TF
LM26GF
LM22GF
GREEN MOWER

LAWN MOWER
BAGGAGE

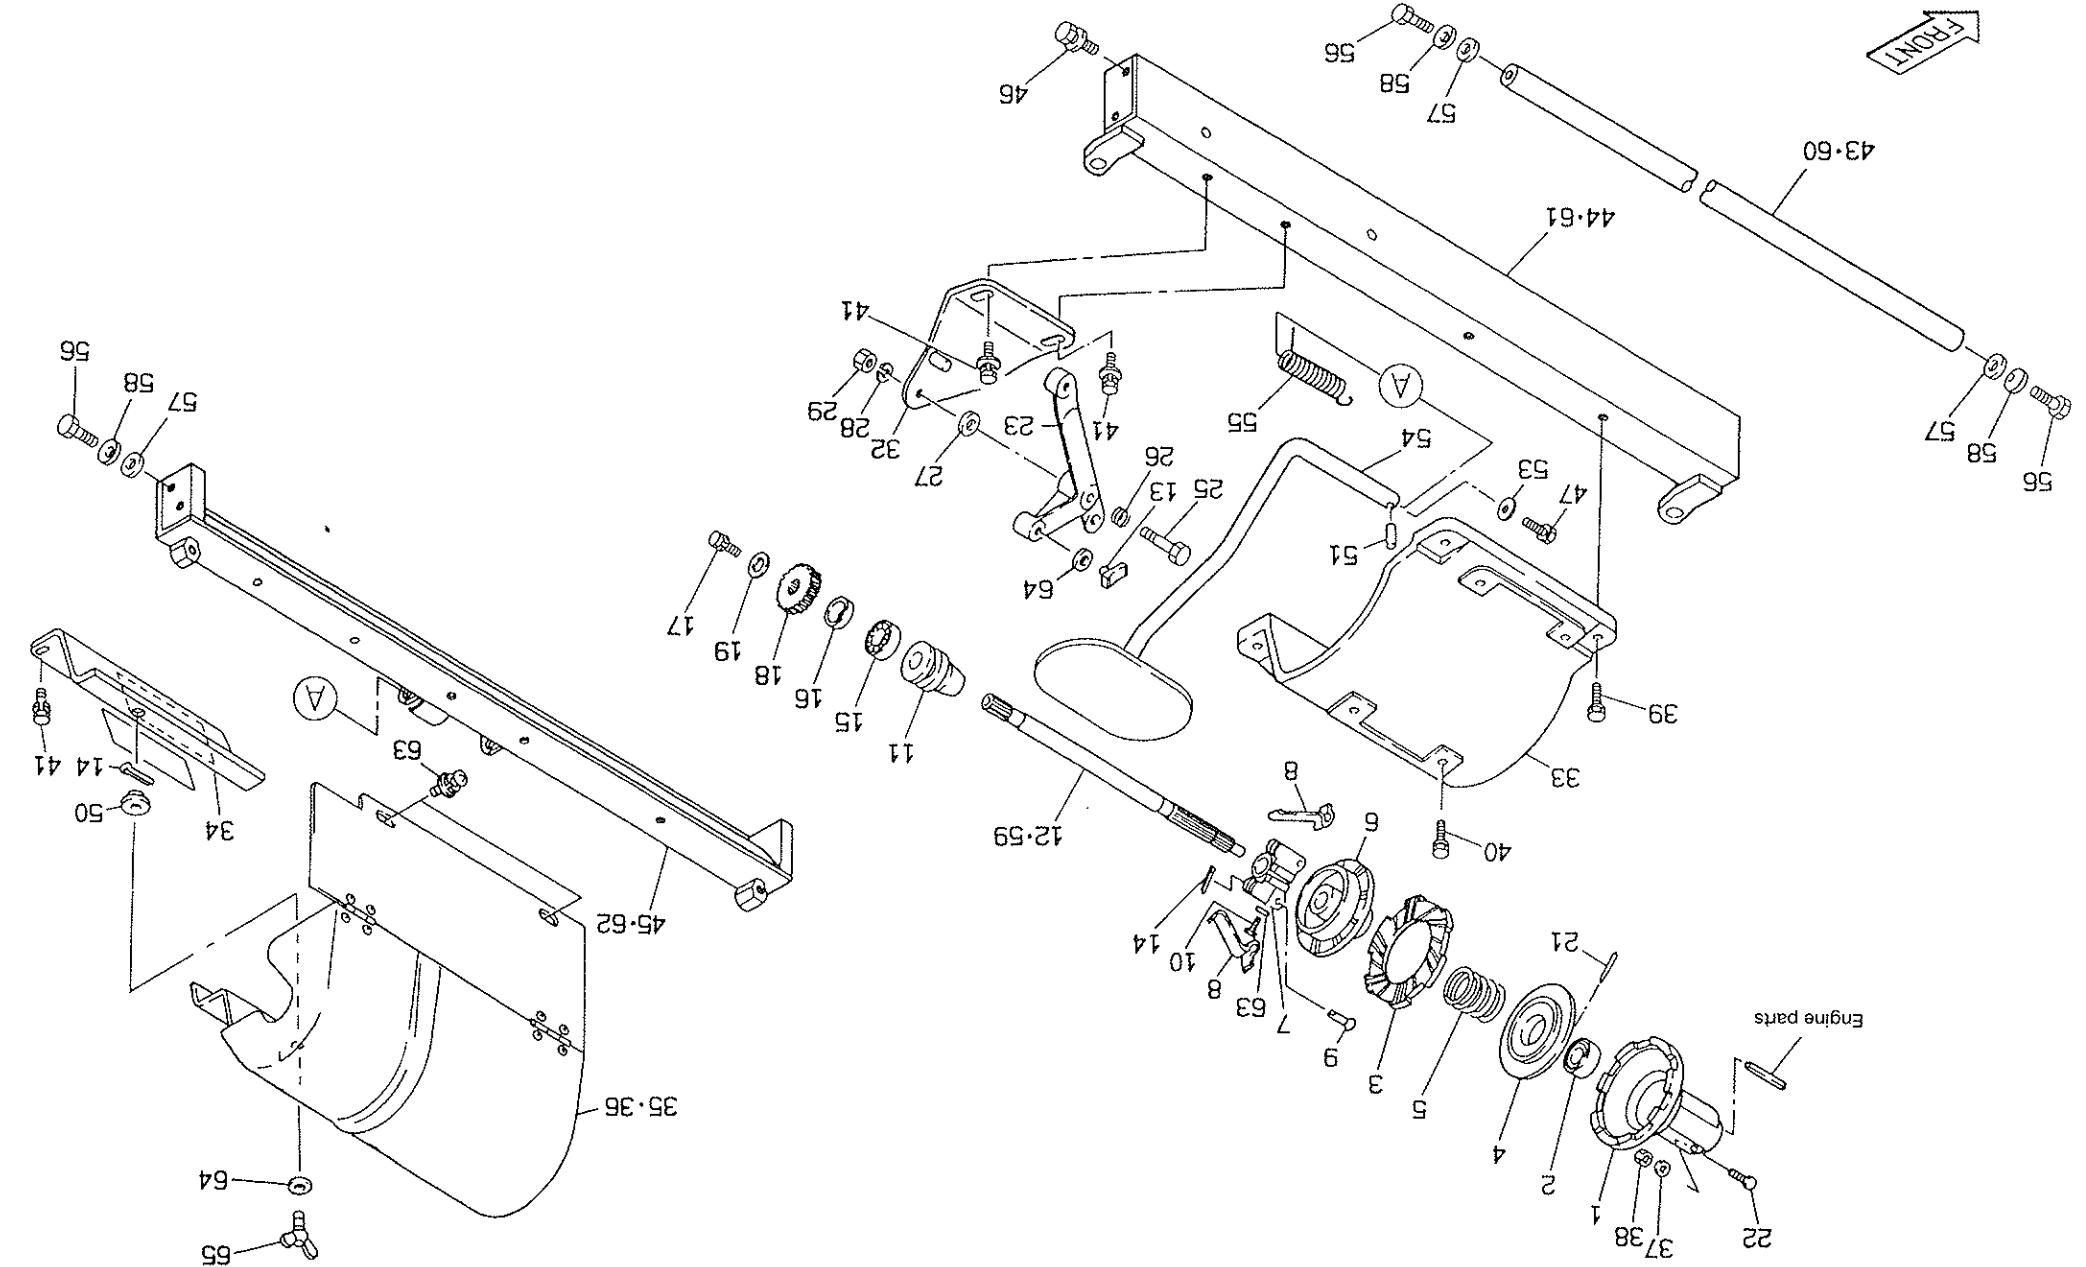


LM22GF
26GF

1. Engine clutch / stand

Catalog No.	Code No.	Part Name	Code No.	Part Name	Qty /Unit	Common Part	Part Price	Detail Price
1-1	K 6911000050	Engine clutch	K 9100000120	Clutch cover ASSY 325	1	○△	○△	○: Parts common to LM22GE △: Parts common to LM55GD *: Parts of LM26GF
1-2	K 0616062020	Bearing 62022NSEC3	K 5000060002	6 washer	1	○△	○△	
1-3	K 1810000030	Clutch disc	K 0143060002	6 nut with disc spring	1	○△	○△	
1-4	K 6911000012	Disc receiver	K 0007080302	8 bolt 30SW	4	○△	○△	
1-5	K 1000000160	3.5 compression spring 3415	K 0007080402	8 bolt 40SW	4	○△	○△	
1-6	K 6911000022	Clutch plate	K 0007080152	8 bolt 15SW	2	○△	○△	
1-7	K 6310000012	Lever mounting base	K 622500033	8.5 pipe 17581	1	○△	○	
1-8	K 1090000010	Clutch spring	K 622500033	LM22GF-0713ZR	1	○		
1-9	K 6040060282	6 round head pin 28	K 622500033	Front frame stay	1	○		
1-10	K 0013060251	6 heat treated bolt 25	K 622500033	LM22GF-0714ZR	1	○		
1-11	K 6311000012	Clutch	K 008010003	10 bolt 40HW	1	○△	○△	
1-12	K 622GE-0312D2	Clutch shaft	K 0006060153	6 bolt 15S	6	○△	○△	
1-13	K 6310000022	Clutch mover	K 0006060153	10 bolt 40HW	1	○△	○△	
1-14	K 0300020162	Clutch mover	K 4031000250	10 staged rubber 224.5	1	△	○△	
1-15	K 0616062030	Bearing 62032NSEC3	K 789900041D	Stand	1	○△	○△	
1-16	LM22GE-0317B0	16-tooth gear collar	K 5012308262	2.3SPCC washer 826	1	○	○	
1-17	K 0006080202	8 bolt 20S	K 5012306252	2.3SPCC washer 625	1	○	○	
1-18	K 6180000010	1-shaft 16-tooth gear	K 789900041D	Stand	1	○△	○△	
1-19	K 5012308262	1-shaft 16-tooth gear	K 0071000592	M10 knock bolt 40	4	○△	○△	
1-20	K 0003100502	10 bolt 50	K 0213100002	10 washer 22	4	○△	○△	
1-21	K 0310050402	5 taper pin 40	K 0213100003	10 disc spring washer 1H	4	○△	○△	
1-22	K 0000060302	6 bolt 30	K 5002100003	10 washer 22	4	○△	○△	
1-23	K 6911000032	Clutch-L-shaped lever	K 0213100002	10 disc spring washer 1H	5	○△	○△	
1-24	K 69000060302	6 bolt 30	K 0213100002	Clutch shaft	5	○△	○△	
1-25	K 0003100502	10 bolt 50	LM26GE-0312D2	Clutch shaft	1	○△	○△	
1-26	K 1000000208	2 compression spring 1514	LM26GF-0714ZR	Front frame stay	1	○△	○△	
1-27	K 5011010202	1SPCC washer 1020	LM26GF-0713AR	Front frame stay	1	○△	○△	
1-28	K 0100100002	10 disc spring washer 1H	K 0044060152	Rear frame stay	1	○△	○△	
1-29	K 0100100002	10 nut	K 500080002	6 + round head screw 15SW	2	○△	○△	
1-30	K 0100100002	10 nut	K 0071000882	8 wing bolt 15 with hole	1	△	○△	
1-31	K 730900002R	L-shaped lever mounting bracket	K 0071000882	8 wing bolt 15 with hole	1	△	○△	
1-32	K 810000060	Engine base M	1-66		1-66	○△	○△	
1-33	K 610000060	Clutch cover mounting bracket	1-67		1-67	○△	○△	
1-34	K 8005000030	Clutch cover mounting Ass'y	1-68		1-68	○△	○△	
1-35	K 910000060	Clutch cover ASYY 265	1-69		1-69	○△	○△	

2. Drum wheel

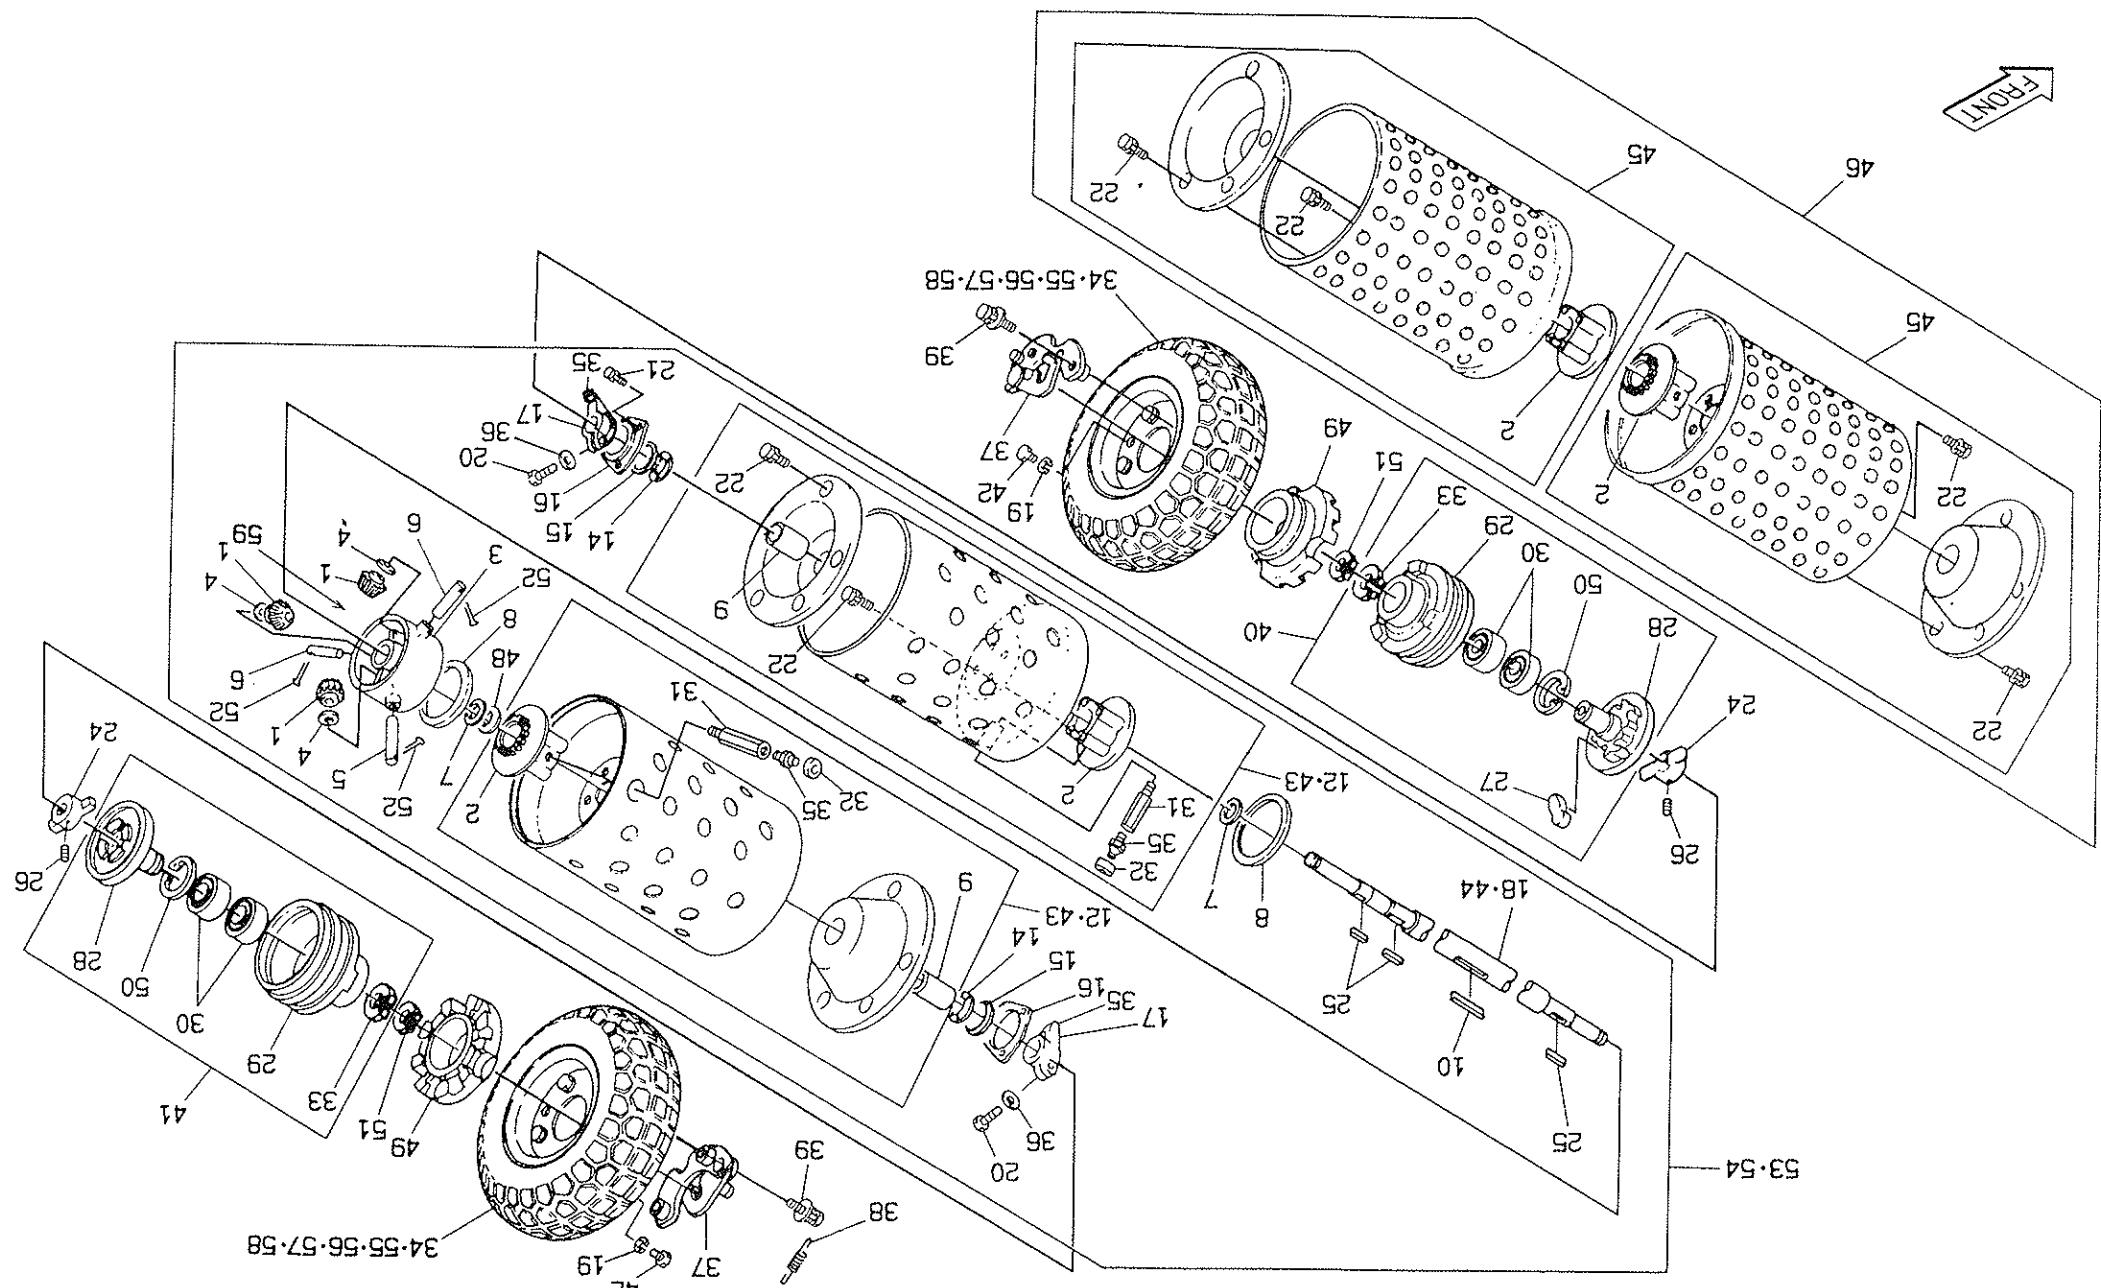


LM22F, 26GF

Catalog No.	Code No.	Part Name	Qty	Code No.	Part Name	Qty	Common Part	Unit	Price
○: Parts common to LM22GF △: Parts common to LM55GD ✕: Parts of LM22GF ✖: Parts of LM26TF									
2-1	K 6191000020	Differential pinion	3	○	Code No.	Part Name	Qty	Common Part	Unit
2-2	K 6191000032	21-tooth differential gear	2	○	Catalog No.	Part Name	Qty	Common Part	Unit
2-3	K 6810000020	Differential housing	1	○	Code No.	Part Name	Qty	Common Part	Unit
2-4	K 5051010220	1C5191P washer 1022	1	○	Part No.	Part Name	Qty	Common Part	Unit
2-5	K 6156000020	Differential pinion shaft 1	1	○	Code No.	Part Name	Qty	Common Part	Unit
2-6	K 6142000010	Differential pinion shaft 2	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-7	K 5051025370	1C5191P washer 25437	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-8	K 0300000300	Differential dust seal	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-9	K 6000000300	254 bush 30.142	4	○	Code No.	Part Name	Qty	Common Part	Unit
2-10	K 0500404350	4 both-end round key 435.5	1	○	Code No.	Part Name	Qty	Common Part	Unit
2-11	LM22GE-0210AR	LM22G drum	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-12	LM22GE-0210A0	LM22T drum	1	○	Code No.	Part Name	Qty	Common Part	Unit
2-13	K 5010625372	0.65PCC washer 25.437	1	○	Code No.	Part Name	Qty	Common Part	Unit
2-14	K 5090000190	Drum washer	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-15	K 4007410500	6.3 feet 41.550	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-16	K 5370000072	Drum bearing cover	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-17	K 611000012	Drum bracing	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-18	LM22GE-0233A2	Axle	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-19	K 0200080002	8S washer	1	○	Code No.	Part Name	Qty	Common Part	Unit
2-20	K 0010080252	8 heat treated bolt 25	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-21	K 0007060122	6 bolt 12SW	6	○	Code No.	Part Name	Qty	Common Part	Unit
2-22	K 0007080202	8 bolt 20SW	18	○	Code No.	Part Name	Qty	Common Part	Unit
2-23	K 0007080202	6 bolt 20SW	6	○	Code No.	Part Name	Qty	Common Part	Unit
2-24	K 651000012	Clutch for axle	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-25	K 0500505200	5 both-end round key 520	3	○	Code No.	Part Name	Qty	Common Part	Unit
2-26	K 0023080061	8 hollow set 6	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-27	K 609000056	Clutch finger	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-28	K 61000040	Ratchet gauge	6	○	Code No.	Part Name	Qty	Common Part	Unit
2-29	K 616000012	56 wheel hub	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-30	K 0613060050	Bearing 60052RDC3	4	○	Code No.	Part Name	Qty	Common Part	Unit
2-31	K 6081000012	Oiling pipe	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-32	K 4031000120	Nipple cock	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-33	K 0401025001	Stop ring S25	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-34	K 2020000050	Tire 4.10/3.50 - 6 Ass'y	2	○	Code No.	Part Name	Qty	Common Part	Unit
2-35	K 1440000012	Grease nipple	4	○	Code No.	Part Name	Qty	Common Part	Unit

LM22GF、26GF

3. Blade reel cylinder/front roller/bottom blade

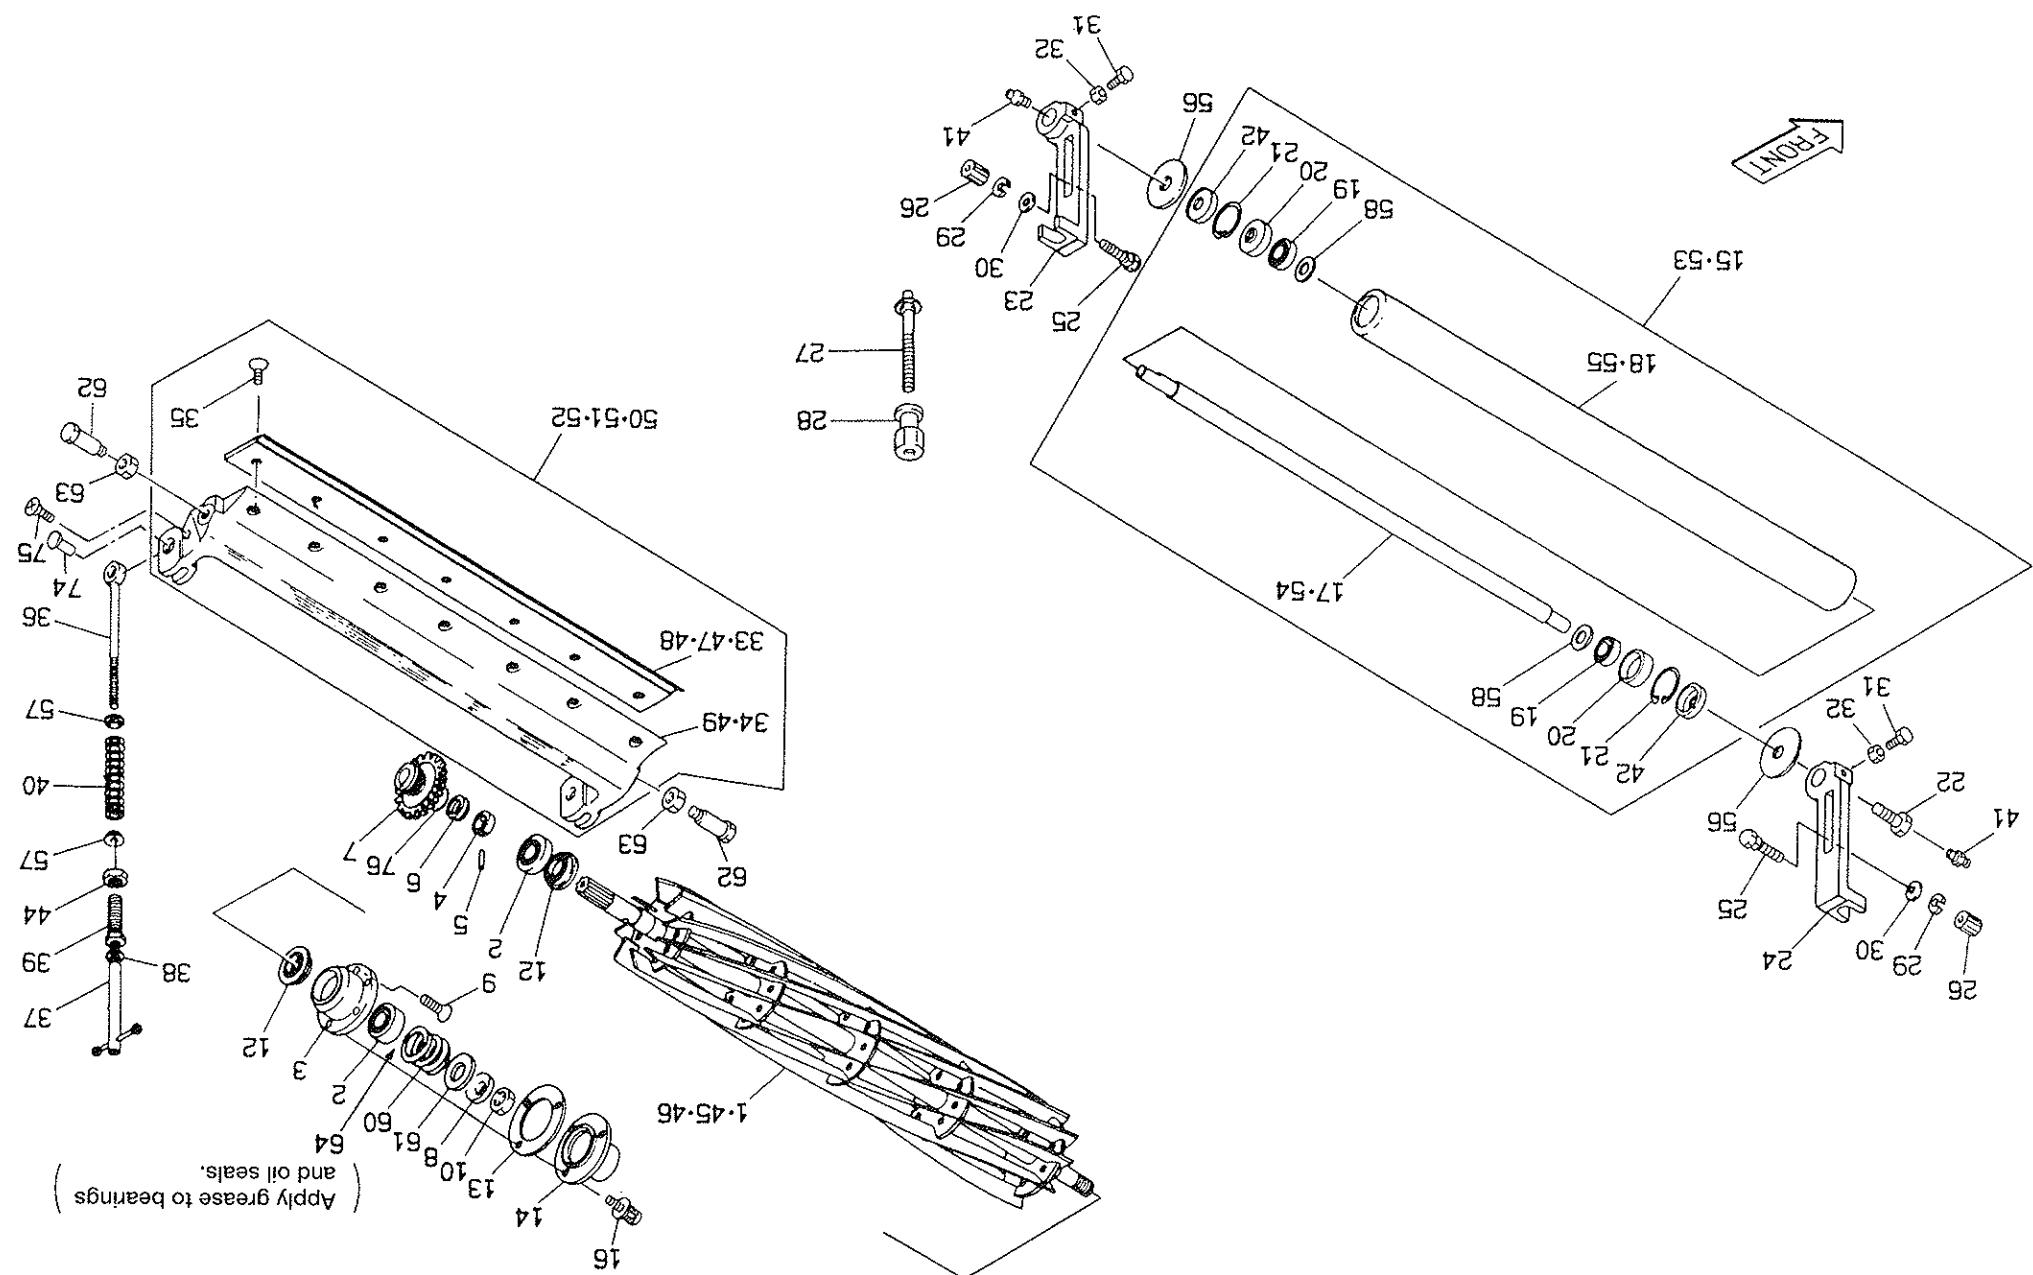


3. Blade reel cylinder/front roller/bed knife

Catalog No.	Code No.	Part Name	Qty	Code No.	Part Name	Qty	Code No.	Part Name	Qty	
3-1	K28022009FR	Blade reel cylinder 557-9	1	K6511000062	Cutter adjusting bolt 205	2	K133000040	Cutter adjuster Assy	2	
3-2	K0631302040	Tapereed roller 30204JRP6	2	K6511000062	Cutter adjusting bolt 205	2	K5011010162	1SPCC washer 1016	2	
3-3	K6903000062	Reel housing	1	K6081000032	Threaded pipe	2	K6081000032	Threaded pipe	2	
3-4	K6213000040	Reel housing collar	1	K0311045250	4.5 needle roller 25.8	1	K0311045250	4.5 needle roller 25.8	1	
3-5	K0041080252	16 disc spring L	3	K0210107Z0	44-tooth gear	1	K0210107Z0	44-tooth gear	1	
3-6	K530000282	Pinching cover	1	K144000012	Grease nipple	2	K086100020	Front roller shaft 596	1	
3-7	K530000282	Pinching cover	1	K144000012	Grease nipple	2	K086100020	Front roller shaft 596	1	
3-8	K0210160001	44-tooth gear	2	K086100020	Oil seal TA1542.38	2	K086100030	Oil seal 6202	1	
3-9	K0041080252	16 disc spring L	3	K3-42	K086100020	Oil seal TA1542.38	2	K0613062020	Beating 62022NSEC3	1
3-10	K0185160002	16 left-hand threaded nut 3P1.5	1	K3-43	K0160000122	Cutter adjusting lock nut	2	K0210107Z0	44-tooth gear	1
3-11	K083000020	Oil seal 254210	2	K3-44	K0160000122	Cutter adjusting lock nut	2	K4011000070	Reel packing	1
3-12	K083000020	Oil seal 254210	1	K3-45	K28026007F	Blade reel cylinder 577-7	1	K8021000010	Front roller Assy 577	1
3-13	K4011000140	Reel packing	1	K3-46	K28026007F	Blade reel cylinder 577-7	1	K6903000040	Reel housing	1
3-14	K6902000070	Reel shaft cover	1	K3-47	K251000140	26g bottom blade No.1	1	K083000042	Stop ring R42	2
3-15	K8021000010	Front roller Assy 577	1	K3-48	K251000140	26g bottom blade No.1	1	K0402042001	K0402042001	1
3-16	K0006802020	8 bolt 20S	3	K3-49	KLM26TF-0502Z0	Bottom blade COMP	1	K6083000042	15 extension pin 19	2
3-17	K6131000122	Front roller shaft 596	1	K3-50	LM26GF-0502Z0	Bottom blade COMP	1	K6083000042	8 tall nut 20	1
3-18	K740000012D	60 roller 577	1	K3-51	LM26GF-0502Z0	Bottom blade COMP	1	K0149083202	K0149083202	1
3-19	K0613062020	Beating 62022NSEC3	1	K3-52	L M26TF-0502Z0	Bottom blade COMP	1	K000602020	8 square-base round-head bolt 35	2
3-20	K0861000030	Oil seal 6202	2	K3-53	K802100020	Front roller Assy 666	1	K6804000020	Left roller bracket	1
3-21	K0402042001	K0402042001	1	K3-54	K6131000132	Front roller shaft 685	1	K6804000020	Right roller bracket	1
3-22	K6083000042	15 extension pin 19	2	K3-55	K7400006D	60 roller 666	1	K0025080352	8 square-base round-head bolt 35	2
3-23	K6083000042	15 extension pin 19	1	K3-56	K5051015470	1C5191P washer 1547	2	K0213080001	8 disc spring washer TH	2
3-24	K6804000020	Left roller bracket	1	K3-57	K6206000052	Spring receiver 1528	4	K6084000050	Roller adjusting screw	2
3-25	K6804000010	Right roller bracket	1	K3-58	K5051015280	1C5191P washer 1528	4	K7900000050	Roller adjusting screw	2
3-26	K0149083202	K0149083202	1	K3-59	K100000740	3.2 compression spring 26.922	1	K010006002	6 nut	2
3-27	K0149083202	K0149083202	1	K3-60	K100000740	3.2 compression spring 26.922	1	K2511000150	22G bottom blade No.1	2
3-28	K6084000063	Roller adjuster	2	K3-61	K5012016282	2SPCC washer 1628	2	K0100060002	6 nut	2
3-29	K0213080001	8 disc spring washer TH	2	K3-62	K6082000010	Cutter pin R	2	K2511000150	22G bottom blade base	1
3-30	K5012008182	2SPCC washer 818	2	K3-63	K0160000113	Lock nut	2	K0071000222	6 heat treated countersunk head screw 12	1
3-31	K000602020	6 bolt 20	2	K3-64	K2931000000	EXCELTITE EP NO.2	1			
3-32	K0100060002	6 nut	2	K3-65	K0041060122	6 + countersunk head screw 12	2			
3-33	K2511000150	22G bottom blade No.1	1	K3-74	K6030100232	10 flat head pin 23	2			
3-34	K022G-F-0508ZR	Bottom blade base	1	K3-75	K0880018000	O-ring P18	1			
3-35	K0071000222	6 heat treated countersunk head screw 12	1	K3-76	K0880018000	O-ring P18	1			

◆: Parts common to LM22GE
△: Parts common to LM55GD
※: Parts of LM62GF

4. Frame/transmission

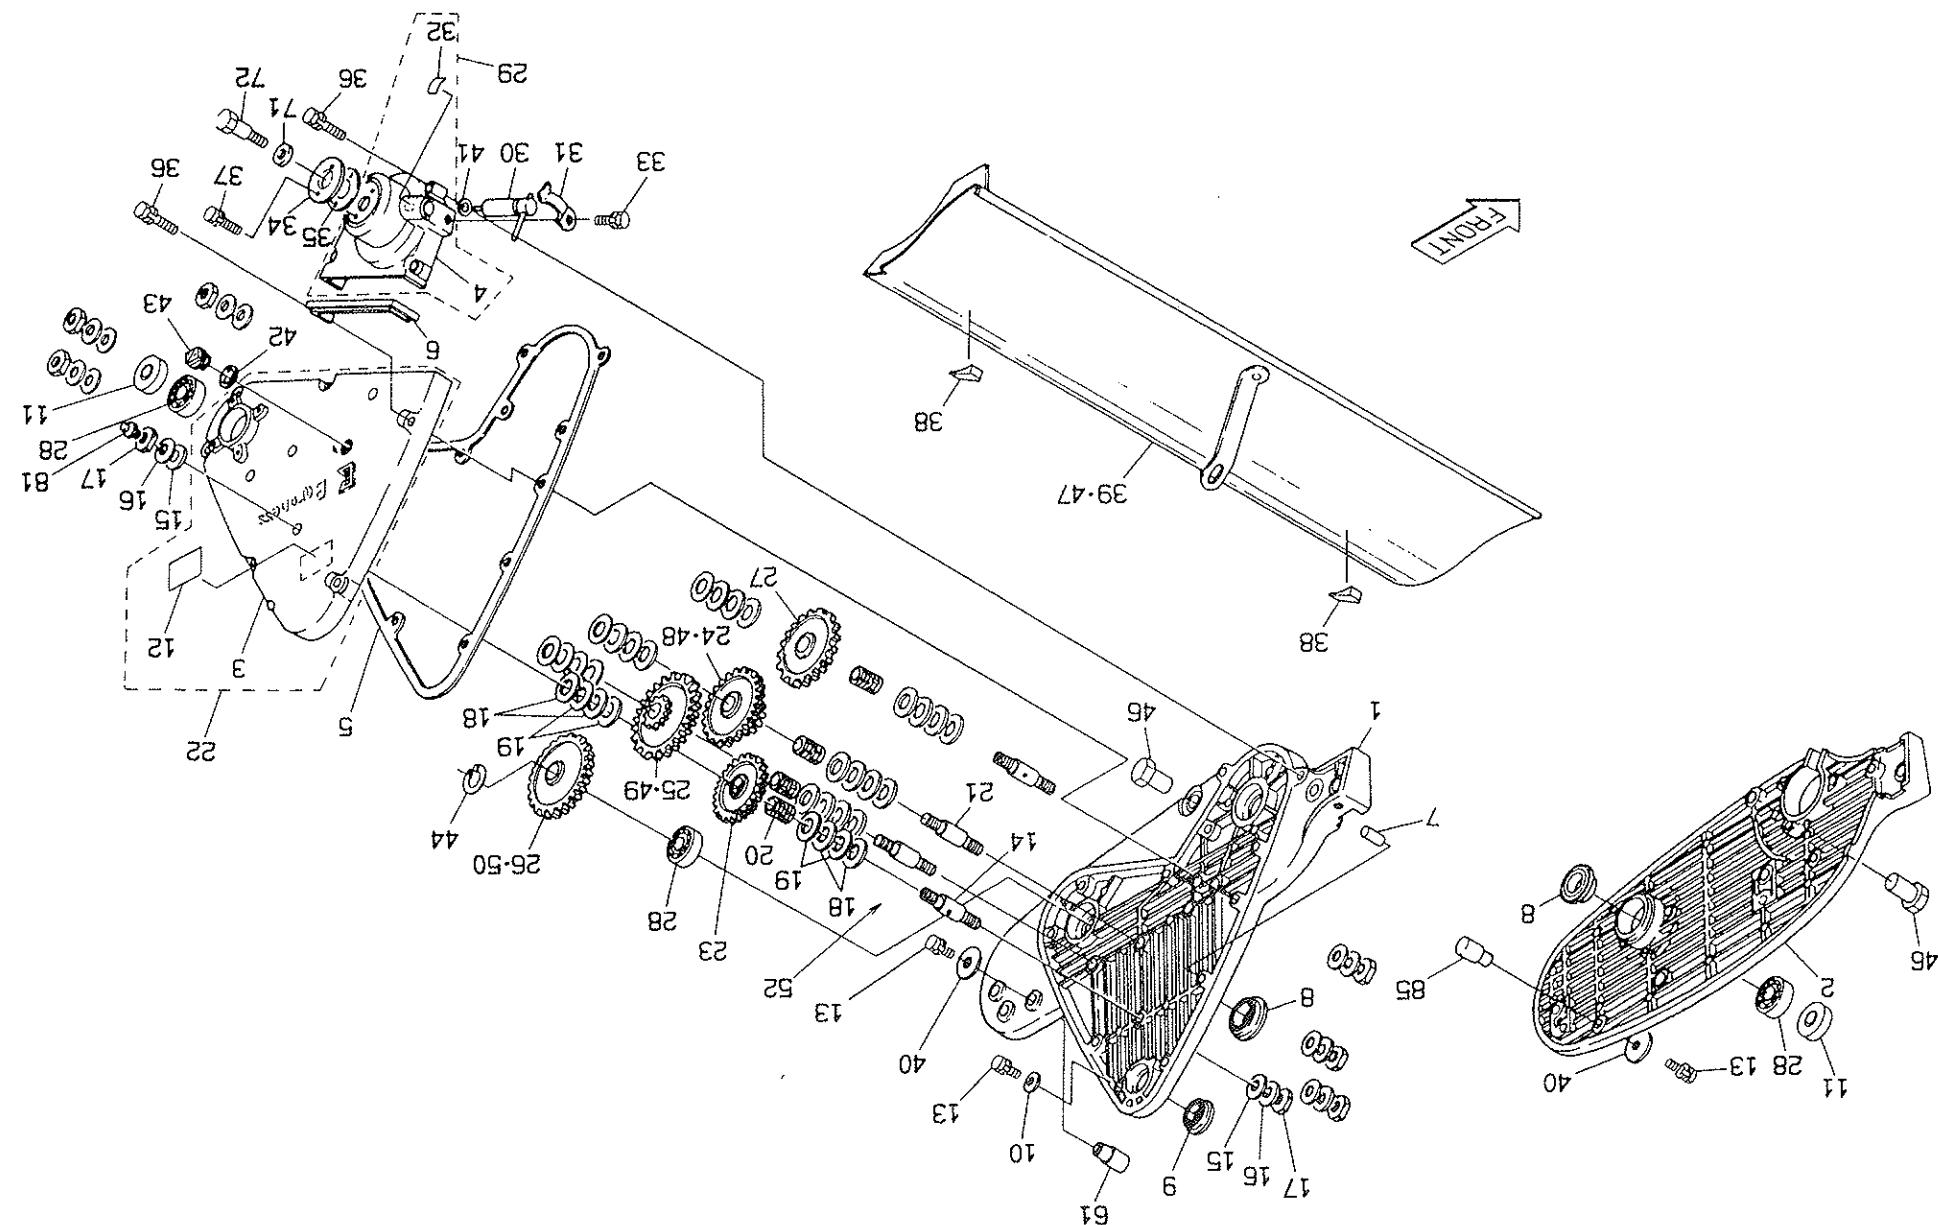

LM22GF, 26GF
LM26TF


4. Frame/transmission

Catalog No.	Code No.	Part Name	Qty	Common Part	Detail Price
Catalog No.	Code No.	Part Name	Qty /Unit	Common Part	Detail Price
4-1	LM22GE-0601C/R	Left frame	1	○	
4-2	LM22GE-0602B/R	Right frame	1	○	
4-3	LM22GE-0603Z/R	Frame cover	1	○	
4-4	LM22GE-0617Z/R	Small frame cover	1	○	
4-5	LM22GE-0604Z/R	Frame packing	1	○	
4-6	K403900040	Joint packing	1	○	
4-7	K6051051200	5.1 heat treated pin 20	1	○	
4-8	K083000020	Oil seal 254210	1	○	
4-9	K0811930070	Oil seal MHS19307	1	○	
4-10	K5011606163	1.6SPCC washer 616	1	○	
4-11	K0852042080	Oil seal PJDN20428	1	○	
4-12	K4209000370	10 hr greasing mark	2	○△	
4-13	K0006060122	6 bolt 12S	1	○	
4-14	K6122000020	Intermediate shaft with tap	3	○	
4-15	K4015110200	1 fiber 10.220	8	○	
4-16	K5011010202	10 nut 3P10H1	8	○	
4-17	K016000282	1SPPCC washer 1020	8	○	
4-18	K5051013280	1C5191P washer 1328	8	○	
4-19	K5020813280	0.8NBS55 washer 1328	16	○	
4-20	K0711317200	Needle KTW131720	16	○	
4-21	K6122000030	Intermediate shaft	2	○	
4-22	K615500030	Intermediate shaft mark	2	○	
4-23	K6183000010	2-shaft 42-tooth gear	1	○	
4-24	K6185000020	2-shaft 42-tooth 42-tooth gear	1	○	
4-25	K6185000030	3-shaft 15-tooth 45-tooth gear	1	○	
4-26	K6181000020	45-tooth axle gear	1	○	
4-27	K6183000020	4-shaft 42-tooth gear	1	○	
4-28	K0601062040	4-shaft 42-tooth 42-tooth gear	1	○	
4-29	LM22GF-0617Z0	Frame cover with small mark	3	○	
4-30	K7321000092	Clutch handle	1	○	
4-31	K1090000058	Clutch retainer spring	1	○	
4-32	K4203000080	ON/OFF mark	1	○	
4-33	K0027060122	6+ Hole upset bolt 12S	1	○	
4-34	LM22GF-0109Z2	Cutter shaft seal collar	1	○	
4-35	LM22GF-0110Z0	Cutter shaft grease retaining rubber	1	○	
4-36	K0007060452	6 bolt 20S	10	○	
4-37	K0006060202	6 bolt 20S	10	○	
4-38	K403900030	Reel cover rubber	2	○	
4-39	LM22GE-0509AR	Cutter cover	2	○	
4-40	K5012306252	2.3SPCC washer 625	2	○	
4-41	K0880015000	O-ring P15	2	○	
4-42	K4010217250	2 oil seat 17.525	1	○	
4-43	K14000000010	Oil tap 18	1	○	
4-44	K0401020001	Stop ring S20	1	○	
4-45	444		2	○	
4-46	K601000010	Cam bush	2	○△	
4-47	LM26GE-0509AR	Cam bush cover	2	○	
4-48	LM5TB--0225Z0	3-shaft 15-tooth 42-tooth gear	1	○	
4-49	LM5TB--0226Z0	5-shaft 14-tooth 46-tooth gear	1	○	
4-50	LM5TB--0237A0	46-tooth gear	1	○	
4-51	K292900000	DYNAMAX EP No.1	700g	○	
4-52	K292900000	DYNAMAX EP No.1	700g	○	
4-61	K615500042	Handle mounting pin R	1	○	
4-62	K615500042	Handle mounting pin L	1	○	
4-63	K08007060452	6 bolt 45SW	10	○	
4-64	K0006060202	6 bolt 20S	10	○	
4-65	LM22GE-0609Z2	Handle mounting pin	4-85	1	15g
4-66	K294100000	Threepond 1104	4-86	1	15g
4-67	K0071000878	10 special bolt 35	4-72	1	△
4-68	K0821228070	Oil seal MHS12287	4-71	1	△
4-69	K144000012	Grease nipple	4-81	2	△
4-70	K144000012	Grease nipple	4-72	1	△
4-71	K0071000878	10 special bolt 35	4-72	1	△
4-72	K0821228070	Oil seal MHS12287	4-71	1	△
4-73	K4203000080	ON/OFF mark	4-85	1	○
4-74	K0027060122	6+ Hole upset bolt 12S	4-86	1	○
4-75	LM22GF-0110Z0	Cutter shaft grease retaining rubber	4-86	1	○

○: Parts common to LM22GE △: Parts common to LM55GD ✕: Parts of LM26F ✖: Parts of LM26TF

5. Handle/engine

LM22GF, 26GF
LM26TF

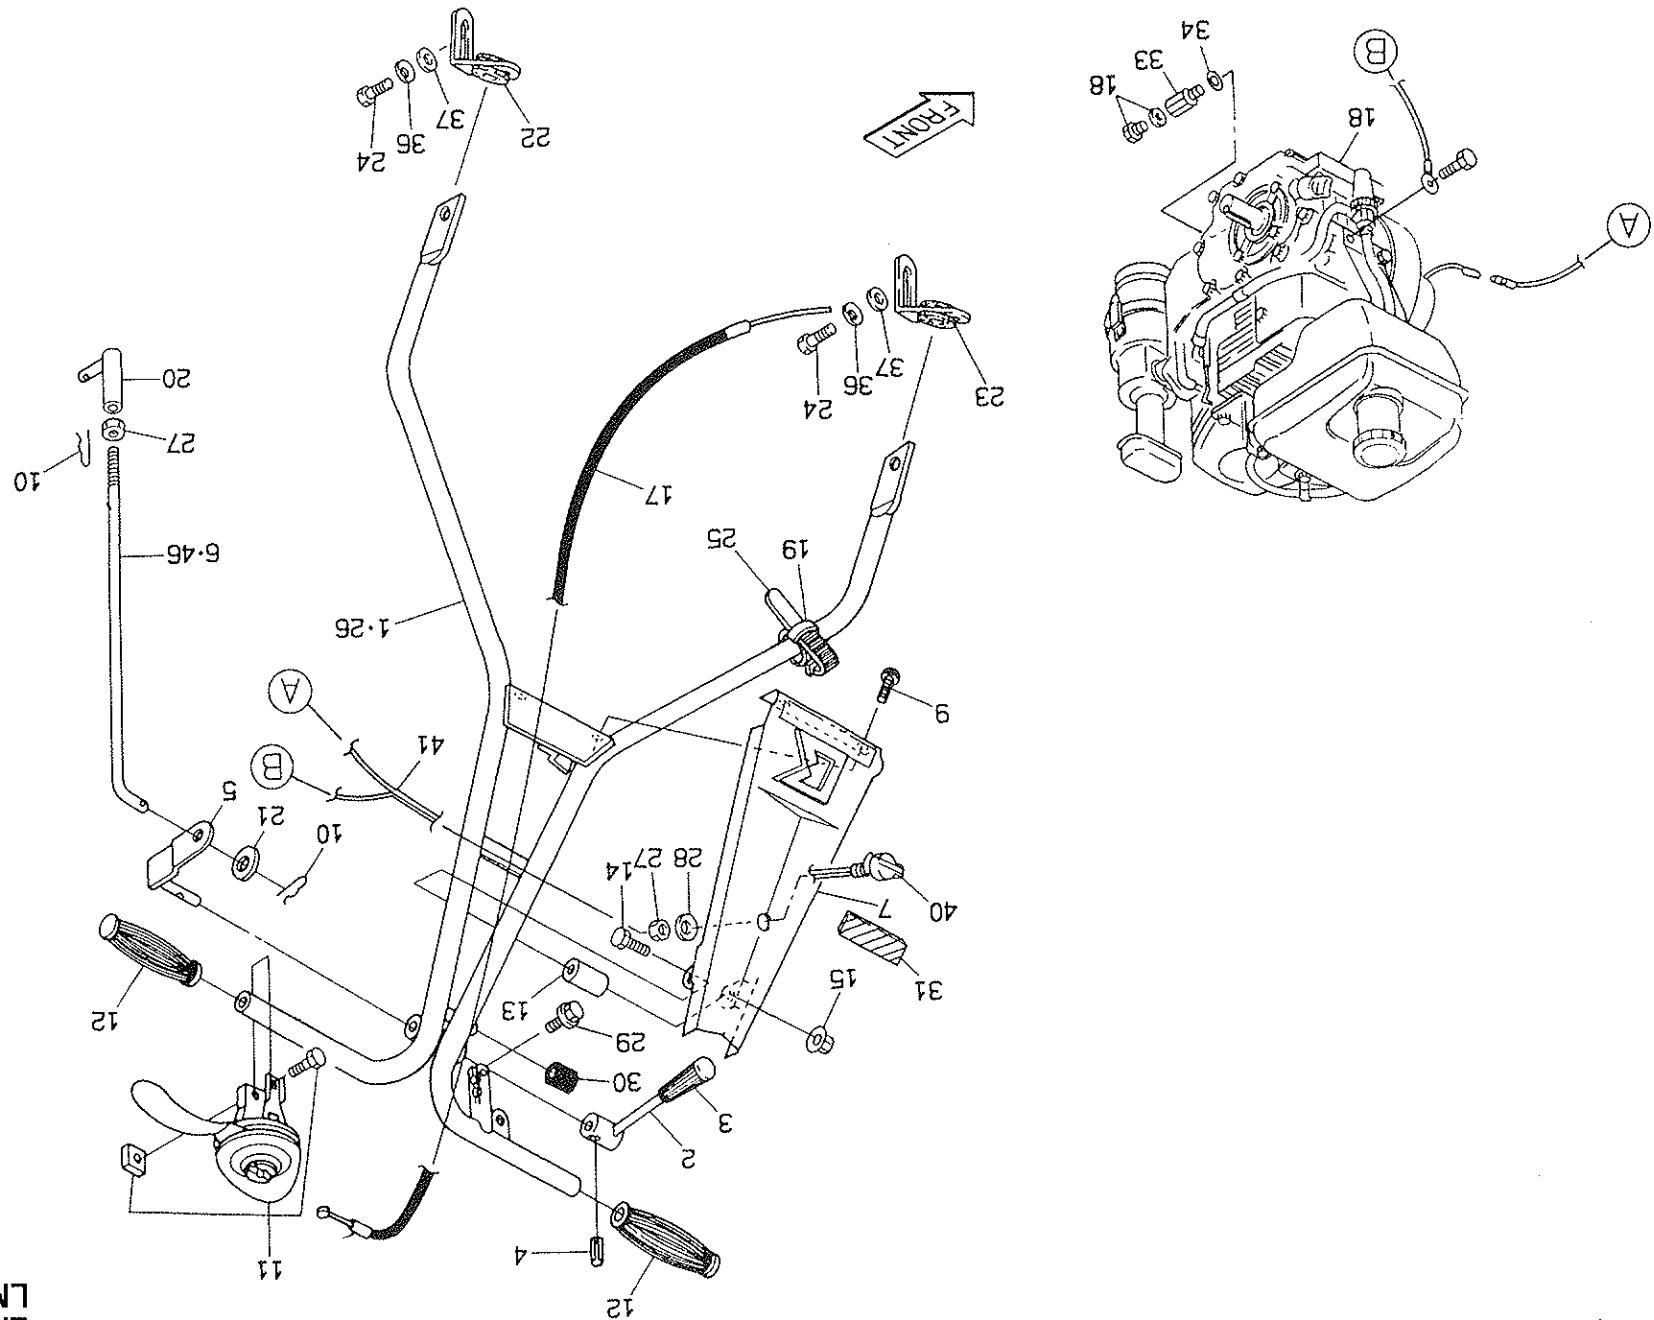

Catalog No.	Code No.	Part Name	Qty /Unit	Common Part	Price	Retail Price
5-1	K 9 2 0 0 0 0 0 7 0	Handle 54	1	△		
5-2	K 8 0 6 0 0 0 0 0 1 0	Travelling clutch lever	1	○△		
5-3	K 1 3 0 0 0 0 0 0 1 0	9 black grip 22	1	○△		
5-4	K 0 3 2 0 0 5 0 2 0 1	5 spring pin 20	1	○△		
5-5	K 7 3 2 1 0 0 0 0 3 3	Clutch lever shaft	1	○△		
5-6	K 7 3 0 1 0 0 0 0 6 3	Clutch rod 995	1	△		
5-7	K 5 3 7 0 0 0 0 0 4 1	Handle cover	1	△		
5-8	K 0 0 4 8 0 4 0 0 6 2	4 + Round head screw 6S	2	○△		
5-9	K 0 3 4 0 8 0 0 0 0 3	8 snap pin	2	○△		
5-10	K 0 0 4 8 0 4 0 0 6 2	5 + Round head screw 25	1	○△		
5-11	K 1 2 0 3 5 2 1 0 0 0	Throttle lever E352100	1	○△		
5-12	K 1 3 0 0 0 0 0 1 4 0	Black handle grip 21	2	○△		
5-13	K 6 2 1 1 0 0 0 0 3 2	6.5SGP collar 10.516	1	○△		
5-14	K 0 0 4 2 0 5 0 2 5 2	5 + Round head screw 25	1	○△		
5-15	K 0 1 4 3 0 5 0 0 0 2	5 nut with disc spring	1	○△		
5-16	K 1 1 1 0 1 3 5 0 0 0	Throttle wire 1350	1	○△		
5-17	K 9 2 0 0 0 0 0 2 0	ROBIN EY150DD190	1	○△		
5-18	K 4 2 4 1 0 0 0 0 7 0	Urethane tube 7	1	○△		
5-19	K 4 2 4 1 0 0 0 0 7 0	Rod adjuster	1	○△		
5-20	K 7 3 0 9 0 0 0 0 1 2	Urethane tube 7	1	○△		
5-21	K 5 0 0 0 0 8 0 0 0 3	8 washer	1	○△		
5-22	K 0 0 1 0 2 0 8 0 0 0 2	Left handle adjuster	1	○△		
5-23	L M 2 2 G E - 0 7 1 5 Z 0	Right handle adjuster	1	○△		
5-24	K 0 0 1 0 1 0 0 2 5 1	10 heat treated bolt 25	1	○△		
5-25	K 4 2 4 1 0 0 0 0 1 0	Nylon band 140	2	○△		
5-26	K 9 2 0 0 0 0 0 0 8 0	Handle 64	1	○△		
5-27	K 0 1 0 2 0 8 0 0 0 2	8 nut 3	1	○△		
5-28	K 0 2 1 0 0 8 0 0 0 2	8 disc spring L	2	○△		
5-29	K 0 0 6 0 5 0 2 0 2	5 bolt 20S	1	○△		
5-30	K 4 0 3 1 0 0 0 1 0 0	Stopper rubber	1	○△		
5-31	K 4 0 3 3 0 0 0 0 7 0	Handle cover rubber cushion	1	○△		
5-32	K 0 0 7 1 0 0 0 9 0 2	Handle pipe of waste oil	1	○△		
5-33	K 0 0 7 1 0 0 0 9 0 6	Gasket	1	○△		
5-34	② 0 2 1 - 1 1 4 0 0 - 2 0	Threaded pipe of waste oil	1	○△		
5-35	③ 0 2 1 - 1 1 4 0 0 - 2 0					


○: Parts common to LM22GE △: Parts common to LM55GD *: Parts of LM26GF

5. Handle/engine

LM22GF

LM26TF

6. Accessory parts / tools

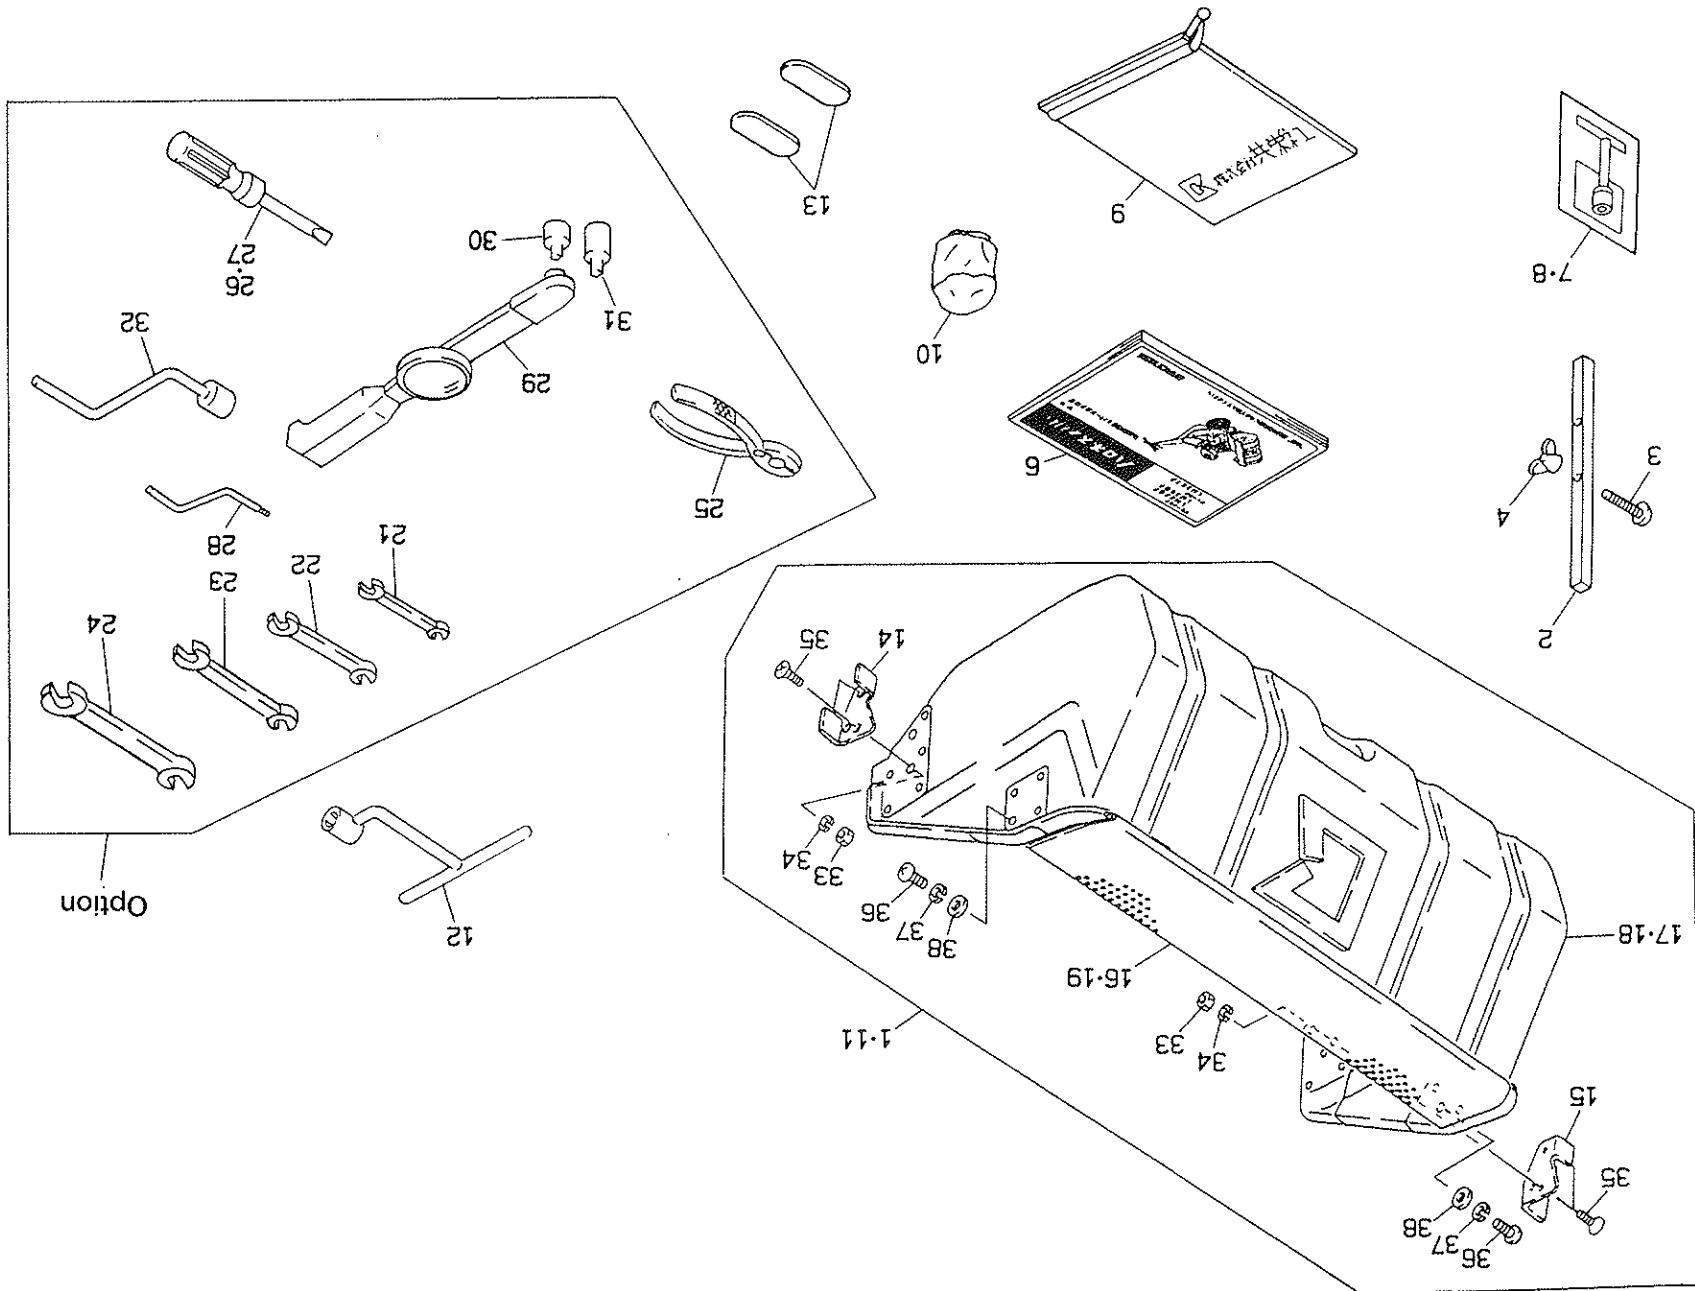

LM22GF, 26GF
LM26TF

Catalog No.	Code No.	Part Name	Qty /Unit	Common Part	Detail Price	Detail Price
6-1	LM22GE-0800	Grass catcher	1	○		
6-2	K6090000052	Mowing height gauge	1	○		
6-3	K0046060502	6 + Tapping screw C-t round head 50	1	○		
6-4	K0141060002	6 butterfly nut 3	1	○		
6-5				○		
6-6	LM22.26-00F-01	Handling manual & parts catalog	1	○		
6-7	K2620EY15D-10	EY15D tool	1	○		
6-8	K2620EY15D-03	EY15D operation manual	1	○		
6-9	K4801000020	Tool bag	1	○		
6-10	K41110000060	Cleaner cover A	1	○		
6-11	LM26GE-0800	Grass catcher	1	○		
6-12	K4802000092	Drum shaft adjuster	1	○		
6-13	K4802000120	0.5 thickness gauge	1	○		
6-14	K5276000013	Left latch	2	○ ▽		
6-15	K5276000023	Right latch	1	○		
6-16	K716300010D	Grass box cover 590	1	○		
6-17	K7900000030	Grass catcher 570COMP	1	○		
6-18	K7900000020	Grass catcher 660COMP	1	○		
6-19	K716300005D	Grass box cover 675	1	○		
6-20	K4810130172	Spanner 13x17	1	○		
6-21	K4810080102	Spanner 8x10	1	○		
6-22	K4810130172	Spanner 19x22	2	○		
6-23	K4810190222	Spanner 24x27	1	○		
6-24	K4810240272	Pliers	1	○		
6-25	K4830000012	The following parts are optional tools.	1	○		
6-26	K4802000010	+/- screwdriver	1	○		
6-27	K4802000020	- screwdriver through 200	1	○		
6-28	K6125000052	Torque wrench 6-60	1	○		
6-29	K4802000370	Reel lappling handle	1	○		
6-30	K4802000352	6.35 x 13 socket wrench	1	○		
6-31	K4802000362	6.35 x 27 socket wrench	1	○		
6-32	K4802000382	Lapping handle	1	○		
6-33	K0100060002	6 nut	1	○		
6-34	K0200060002	6S washer	4	○ ▽		
6-35	K0041060202	6 + Countersunk head screw 20	4	○ ▽		

○: Parts common to LM22GE △: Parts common to LM55GD *: Parts of LM26GF


6. Accessory parts

LM22GF, 26GF

6-1	LM22GE-0800	Grass catcher	1	○		
6-2	K6090000052	Mowing height gauge	1	○		
6-3	K0046060502	6 + Tapping screw C-t round head 50	1	○		
6-4	K0141060002	6 butterfly nut 3	1	○		
6-5				○		
6-6	LM22.26-00F-01	Handling manual & parts catalog	1	○		
6-7	K2620EY15D-10	EY15D tool	1	○		
6-8	K2620EY15D-03	EY15D operation manual	1	○		
6-9	K4801000020	Tool bag	1	○		
6-10	K41110000060	Cleaner cover A	1	○		
6-11	LM26GE-0800	Grass catcher	1	○		
6-12	K4802000092	Drum shaft adjuster	1	○		
6-13	K4802000120	0.5 thickness gauge	1	○		
6-14	K5276000013	Left latch	2	○ ▽		
6-15	K5276000023	Right latch	1	○		
6-16	K716300010D	Grass box cover 590	1	○		
6-17	K7900000030	Grass catcher 570COMP	1	○		
6-18	K7900000020	Grass catcher 660COMP	1	○		
6-19	K716300005D	Grass box cover 675	1	○		
6-20	K4810130172	Spanner 13x17	1	○		
6-21	K4810080102	Spanner 8x10	1	○		
6-22	K4810130172	Spanner 19x22	2	○		
6-23	K4810190222	Spanner 24x27	1	○		
6-24	K4810240272	Pliers	1	○		
6-25	K4830000012	The following parts are optional tools.	1	○		
6-26	K4802000010	+/- screwdriver	1	○		
6-27	K4802000020	- screwdriver through 200	1	○		
6-28	K6125000052	Torque wrench 6-60	1	○		
6-29	K4802000370	Reel lappling handle	1	○		
6-30	K4802000352	6.35 x 13 socket wrench	1	○		
6-31	K4802000362	6.35 x 27 socket wrench	1	○		
6-32	K4802000382	Lapping handle	1	○		
6-33	K0100060002	6 nut	1	○		
6-34	K0200060002	6S washer	4	○ ▽		
6-35	K0041060202	6 + Countersunk head screw 20	4	○ ▽		


6-36	K0042080202	8 + Round head screw 20	2	○ ▽		
6-37	K020008002	8S washer	2	○ ▽		
6-38	K500008002	8 washer	2	○ ▽		
6-39	K500008002	8 washer	2	○ ▽		
6-40	K0141060002	6 butterfly nut 3	1	○		
6-41	K0046060502	6 + Tapping screw C-t round head 50	1	○		
6-42	K0141060002	6 butterfly nut 3	1	○		
6-43	K2620EY15D-10	Handling manual & parts catalog	1	○		
6-44	K2620EY15D-03	EY15D tool	1	○		
6-45	K4801000020	Tool bag	1	○		
6-46	K41110000060	Cleaner cover A	1	○		
6-47	K716300010D	Grass box cover 590	1	○		
6-48	K7900000030	Grass catcher 570COMP	1	○		
6-49	K7900000020	Grass catcher 660COMP	1	○		
6-50	K716300005D	Grass box cover 675	1	○		
6-51	K0041060202	6 + Countersunk head screw 20	4	○ ▽		
6-52	K0200060002	6S washer	4	○ ▽		
6-53	K0141060002	6 butterfly nut 3	1	○		
6-54	K0200060002	6S washer	4	○ ▽		
6-55	K0041060202	6 + Countersunk head screw 20	4	○ ▽		

7. Internal expanding brake parts

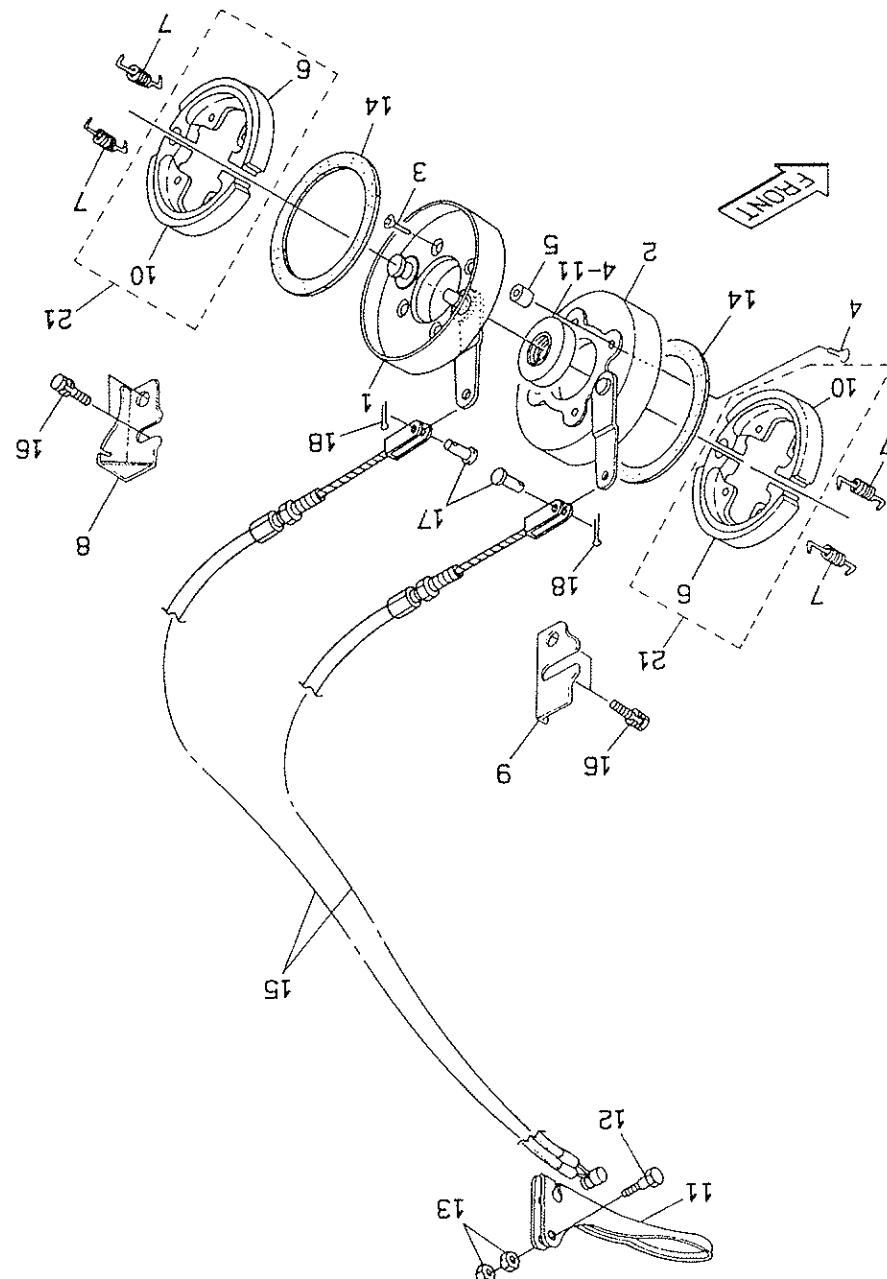

LM22GF, 26GF
LM26TF


8. Detaching reel (Option)

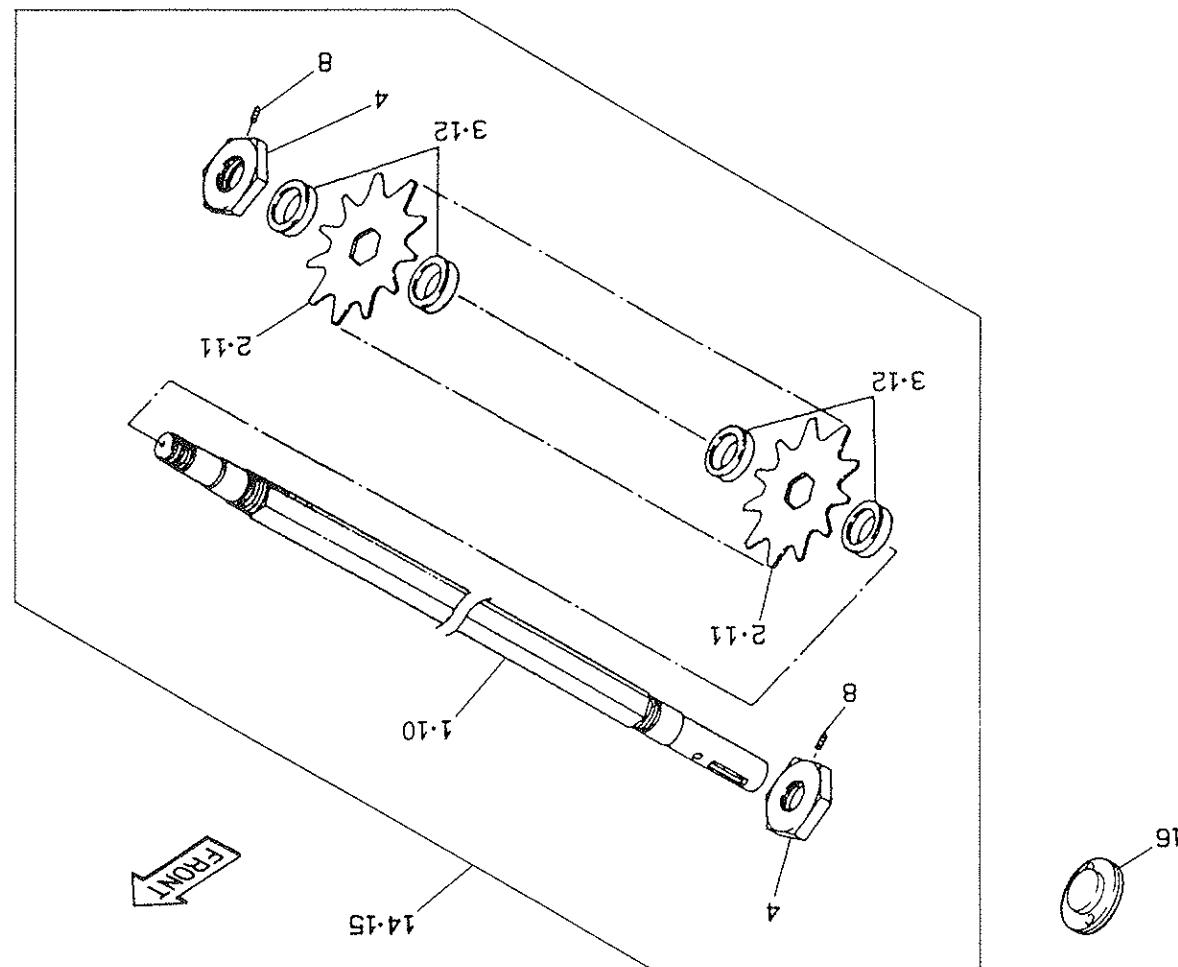

LM26TF
LM22GF、26GF

Catalog No.	Code No.	Part Name	Qty	Common Part	Detail Price	Part No.	Code No.	Part Name	Qty	Common Part	Detail Price	Part No.	Code No.	Part Name	Qty	Common Part	Detail Price
8-1	LM22GF-1702Z2	Vertical blades shaft	1			K2570000029	Vertical blade 128	36				K0023060121	6 hollow set 12	2			
8-2	LM22GF-1702Z2	Vertical blades shaft	1			K6212001172	Vertical blade 128	37				LM26GF-1702Z0	Vertical blades shaft	1			
8-3	K0160000422	Vertical blade 128	27			K2570000029	Vertical blade 128	36				K6212001172	Vertical blade 128	37			
8-4	K0160000422	Vertical blade 128	27			K0160000422	Vertical blade 128	37				K0160000422	Vertical blade 128	37			
8-5	K0023060121	6 hollow set 12	2			K0023060121	6 hollow set 12	2				K0023060121	6 hollow set 12	2			
8-6	LM26GF-1702Z2	Vertical blades shaft	1			LM26GF-1702Z0	Vertical blades shaft	1				LM26GF-1702Z0	Vertical blades shaft	1			
8-7	K0023060121	6 hollow set 12	2			K6212001173	Vertical blade 128	43				K6212001173	Vertical blade 128	43			
8-8	K0023060121	6 hollow set 12	2			K2570000029	Vertical blade 128	44				K2570000029	Vertical blade 128	44			
8-9	LM26GF-1702Z2	Vertical blades shaft	1			K6212001173	Vertical blade 128	44				K6212001173	Vertical blade 128	44			
8-10	K0023060121	6 hollow set 12	2			K2570000029	Vertical blade 128	44				K0023060121	6 hollow set 12	2			
8-11	LM26GF-1702Z2	Vertical blades shaft	1			K6212001173	Vertical blade 128	44				LM26GF-1702Z0	Vertical blades shaft	1			
8-12	K2570000029	Vertical blade 128	43			K6212001173	Vertical blade 128	44				K2570000029	Vertical blade 128	43			
8-13	K6212001173	Vertical blade 128	44			K2570000029	Vertical blade 128	44				K6212001173	Vertical blade 128	44			
8-14	LM22GF-1701Z0	Detaching reel Ass'y	1			K6212001173	Vertical blade 128	44				LM22GF-1701Z0	Detaching reel Ass'y	1			
8-15	LM26GF-1701Z0	Detaching reel Ass'y	1			K6212001173	Vertical blade 128	44				LM26GF-1701Z0	Detaching reel Ass'y	1			
8-16	LM22GE-0109Z0	Cutter shaft grease retainer	1			K6212001173	Vertical blade 128	44				LM22GE-0109Z0	Cutter shaft grease retainer	1			

9. Sweeping brush (Option)

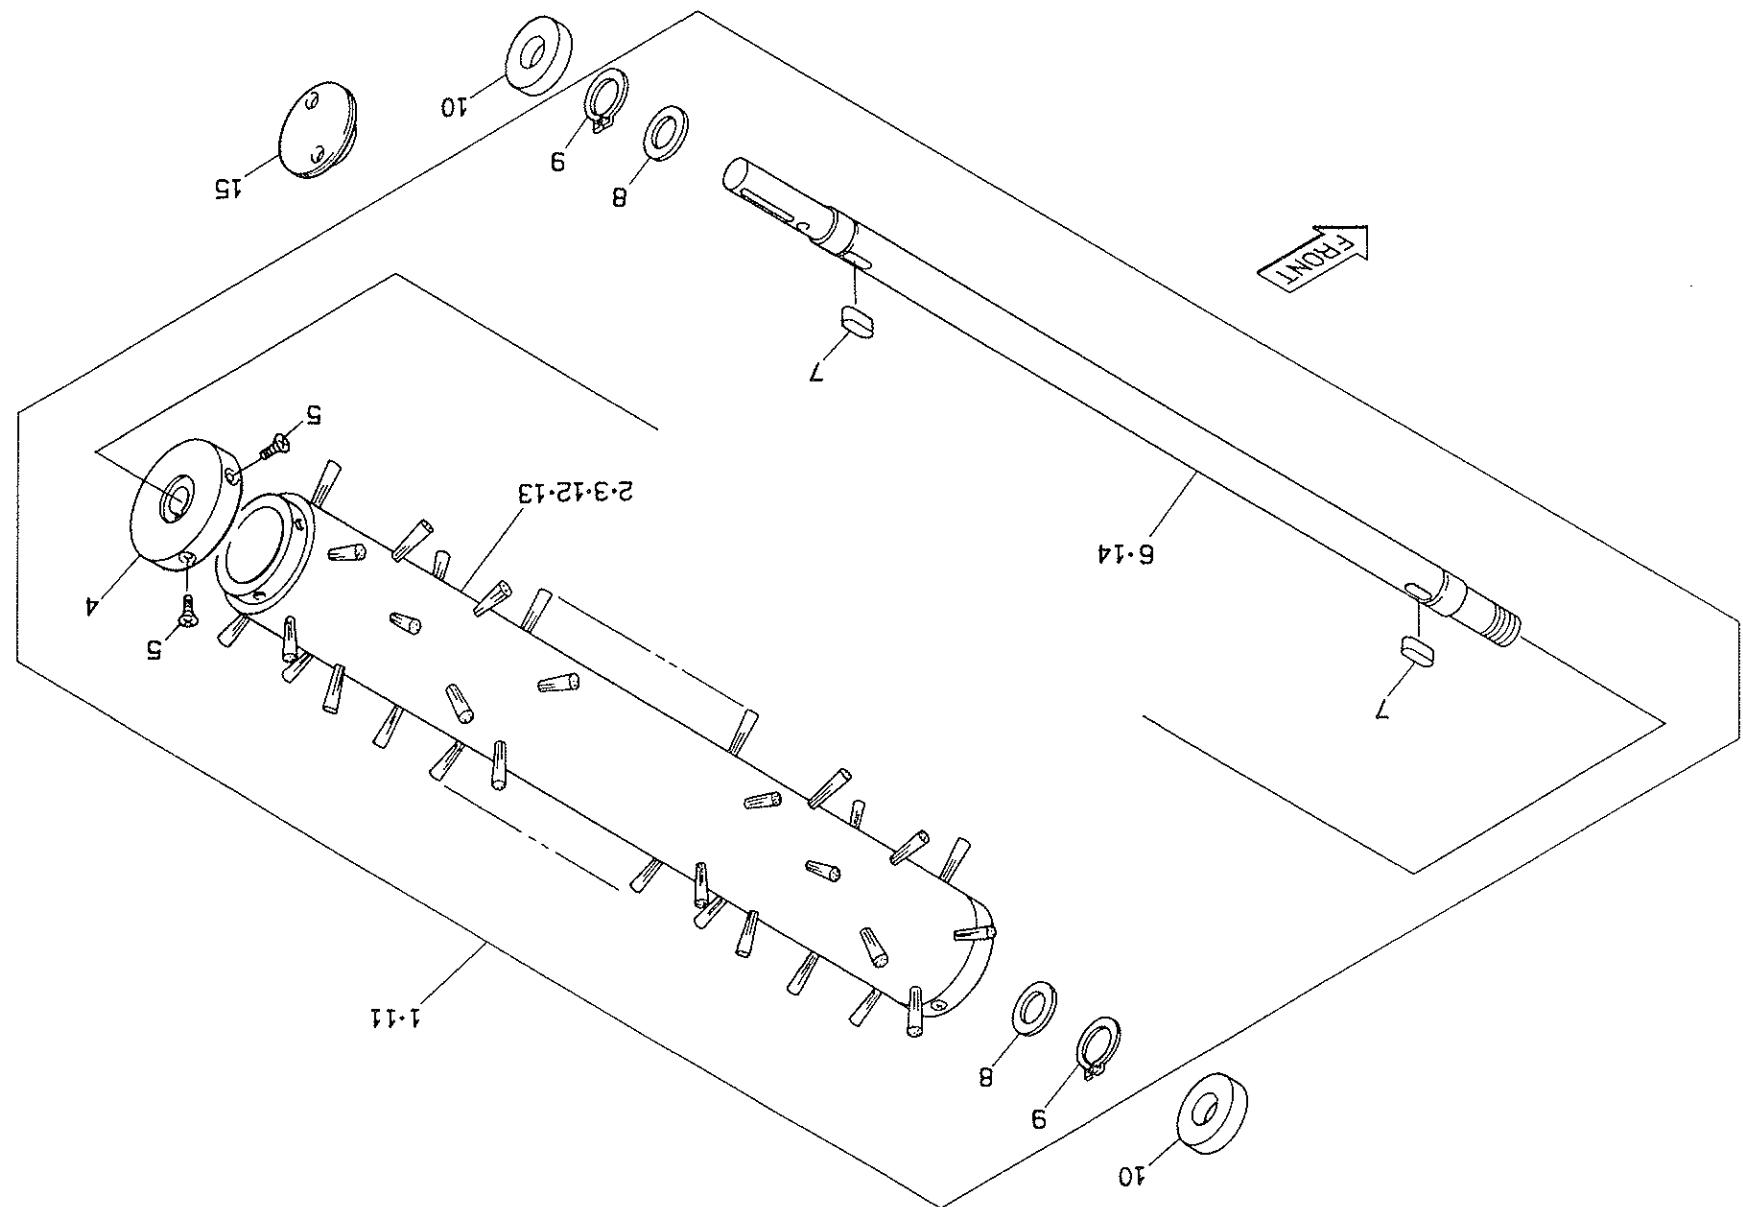

LM22GF, 26GF



KYOEISHA CO.,LTD.

Head Office

1-26, Miyuki-cho, Toyokawa,
Aichi-Pref. 442-8530 Japan.

BRONNESS

Turf Care Machinery
Tel : (0533) 84-1221
Fax: (0533) 84-1220